

SOR/UVR/PS-SOR - Sganciatore di apertura/minima tensione da cablare T4-T5-T6





SOR/UVR/PS-SOR - T4-T5-T6 Opening/undervoltage release to wire

SOR/UVR/PS-SOR - Arbeitsstrom-/Unterspannungsauslöser, zu verdrahten, T4-T5-T6

SOR/UVR/PS-SOR - Déclencheur d'ouverture à émission/à minimum de tension à câbler T4-T5-T6


SOR/UVR/PS-SOR - Relé de apertura/tensión mínima sin cablear T4-T5-T6

SOR/UVR/PS-SOR - T4-T5-T6不带导线的分励脱扣器或欠电压脱扣器

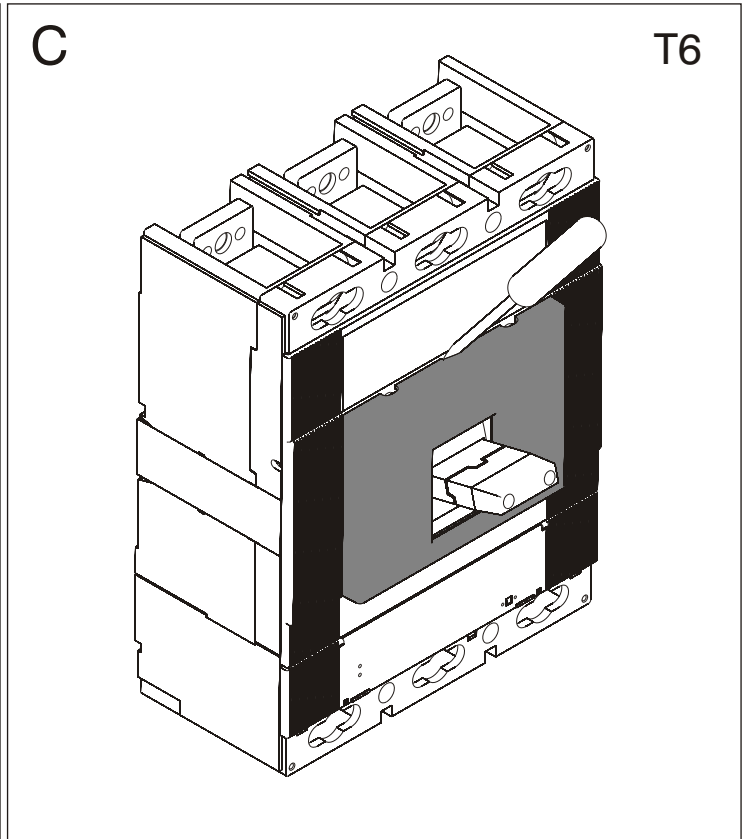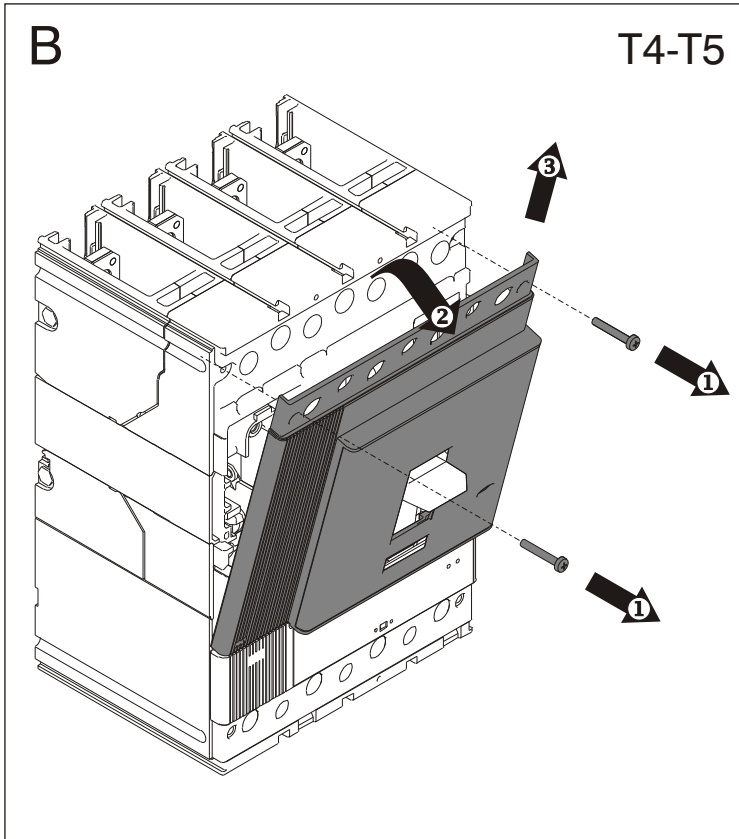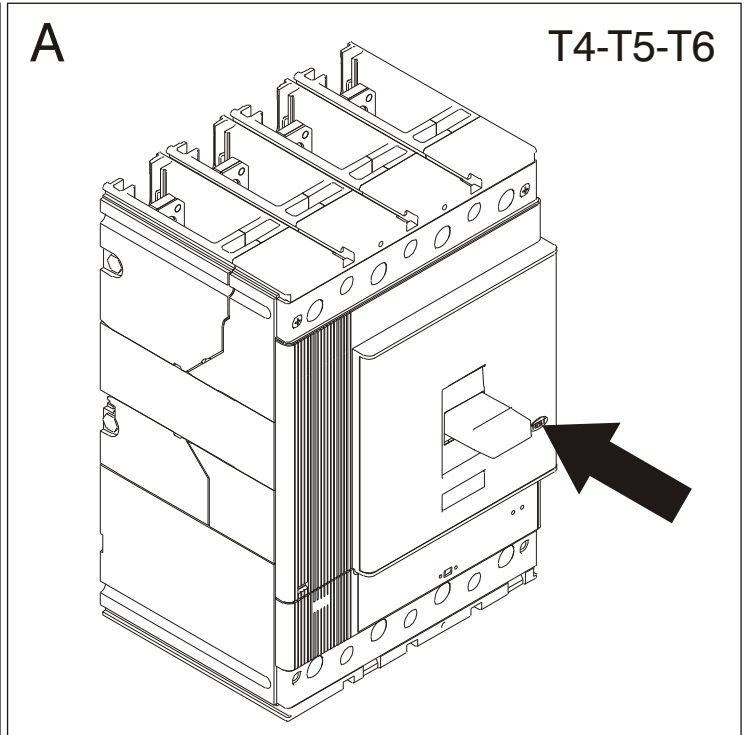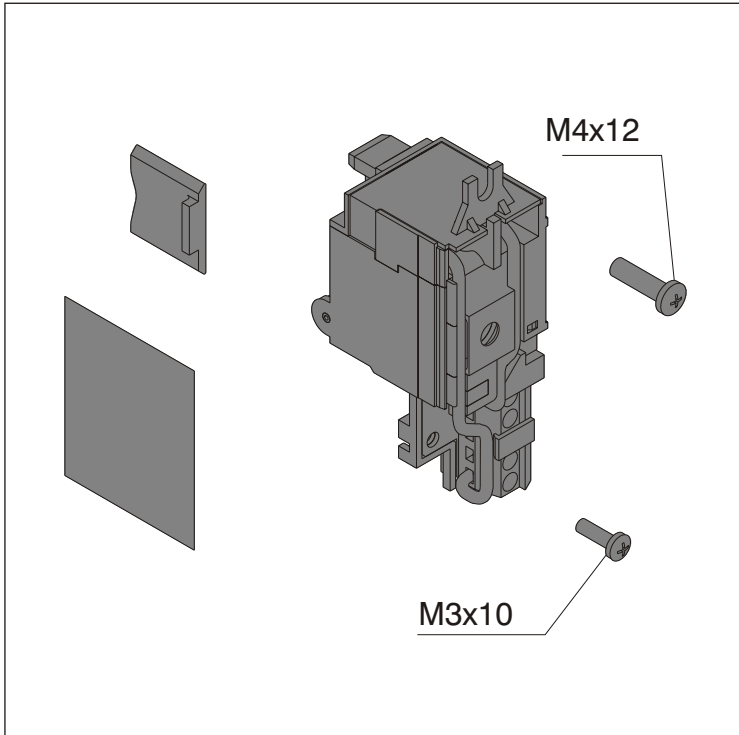


D

T6

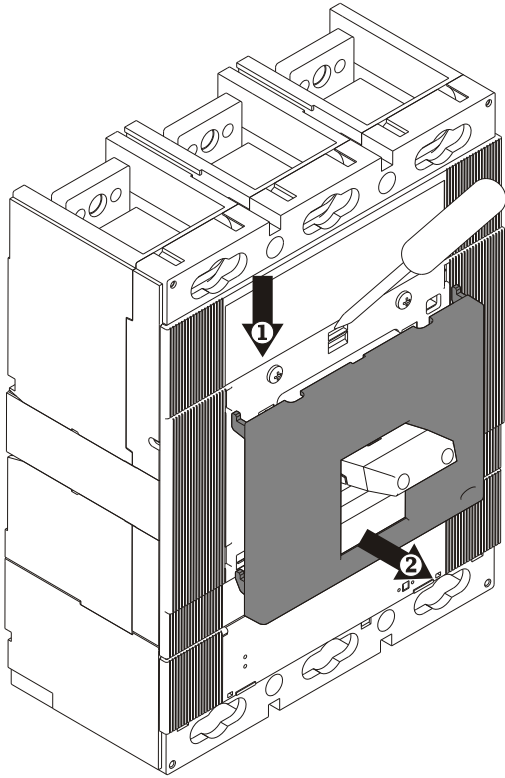


E

T4-T5

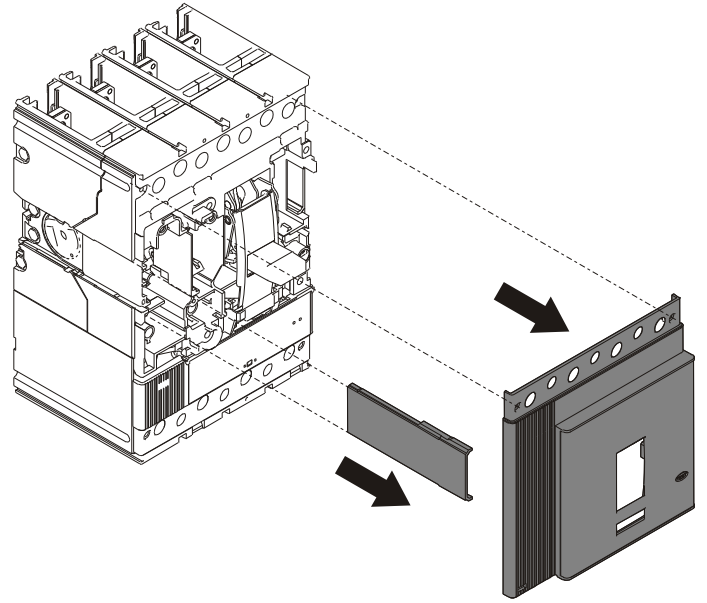

F

T6

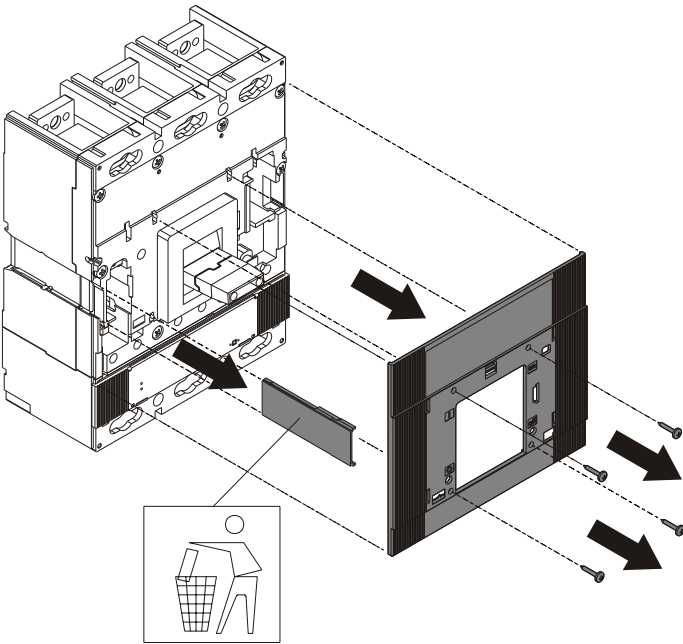

G

La slitta deve essere montata solo nelle seguenti versioni:

Only install the slide in the following versions:

Der Schlitten muss nur bei den folgenden

Versionen montiert werden:


Le rail ne doit être monté que dans les versions

suivantes:





Montar la corredera solamente en las siguientes





versiones:

如下断路器需要装配此滑块:

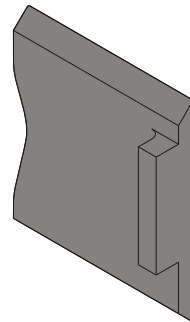


T4	III	OK
T4	IV	NO
T5	III	OK
T5	IV	NO
T6	III	NO
T6	IV	NO

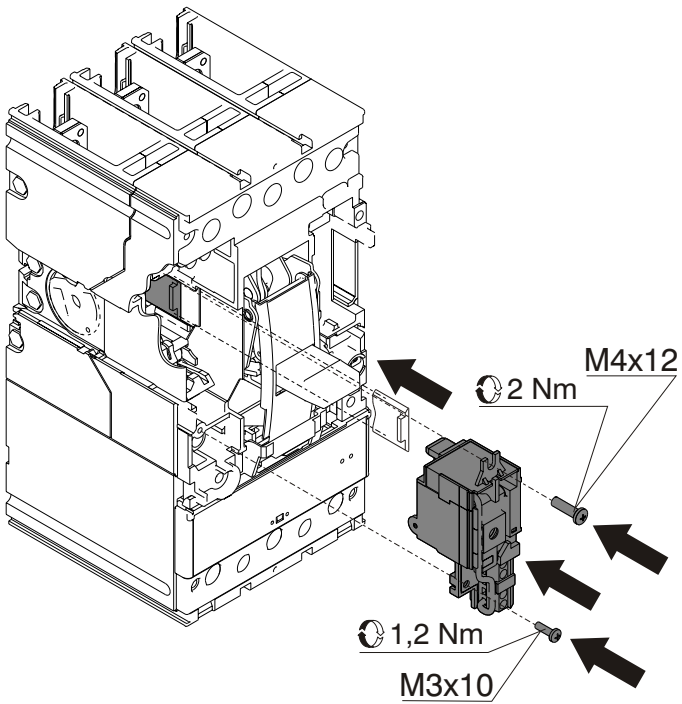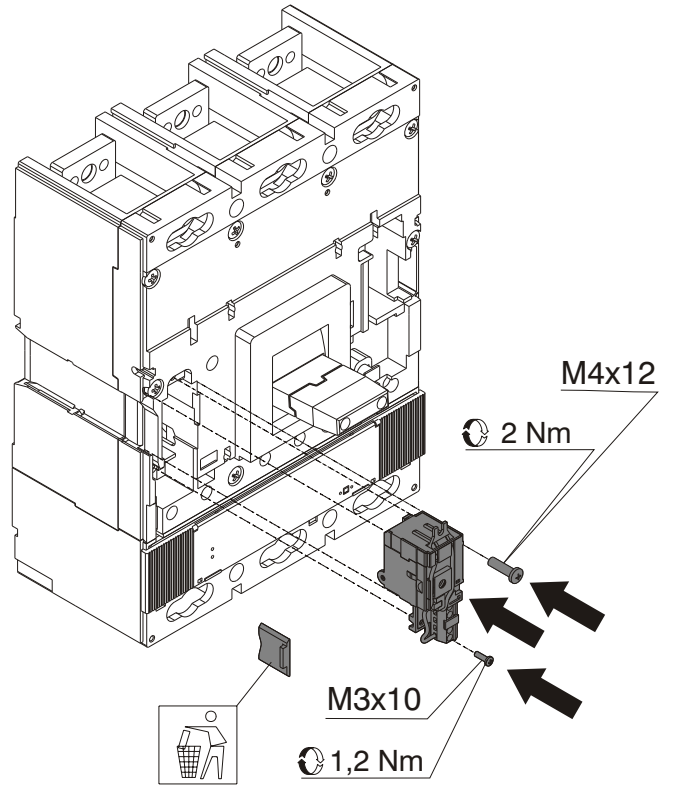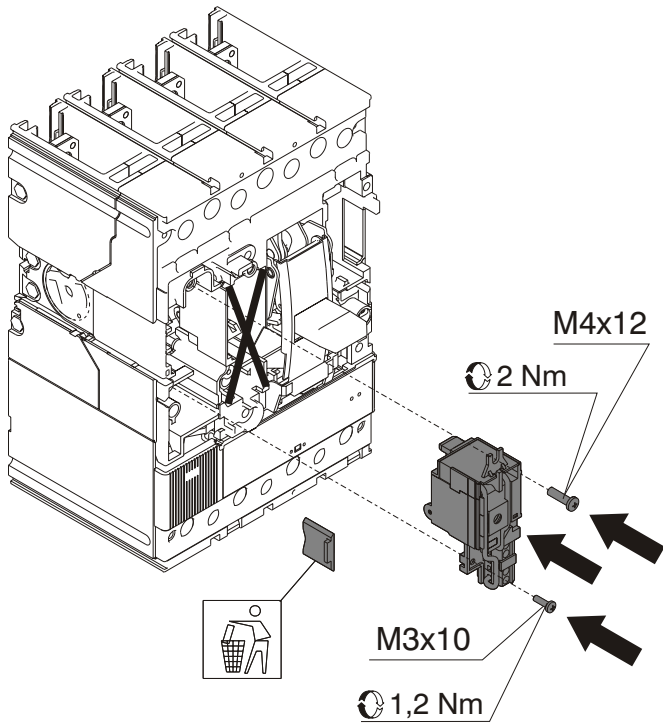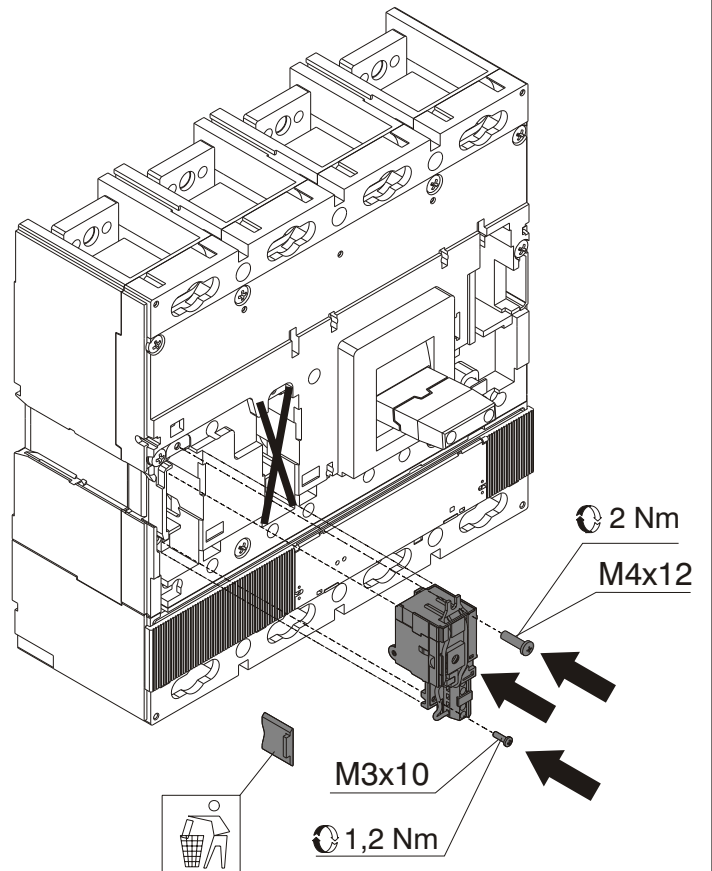H**T4-T5 III****I****T6 III****L****T4-T5 IV****M****T6 IV**

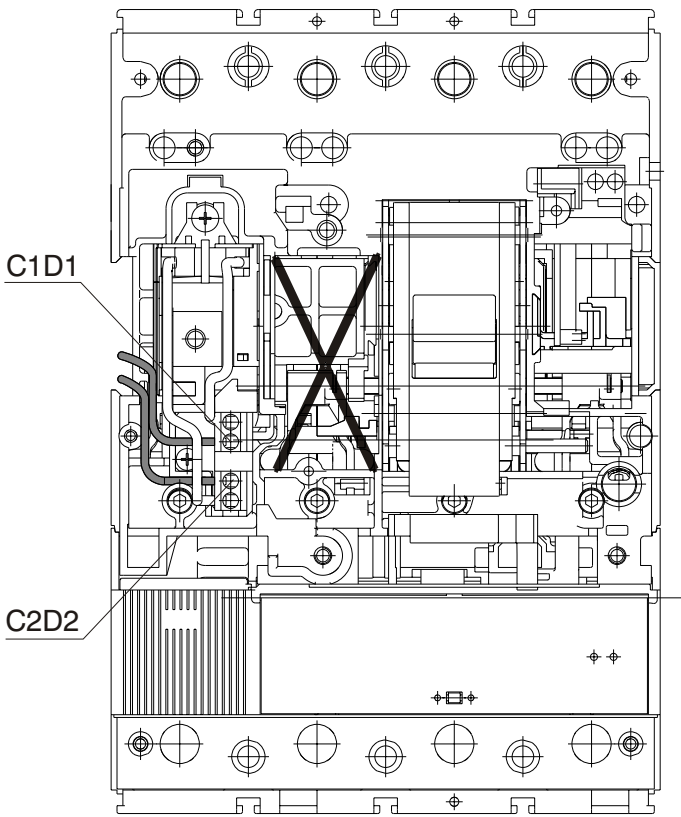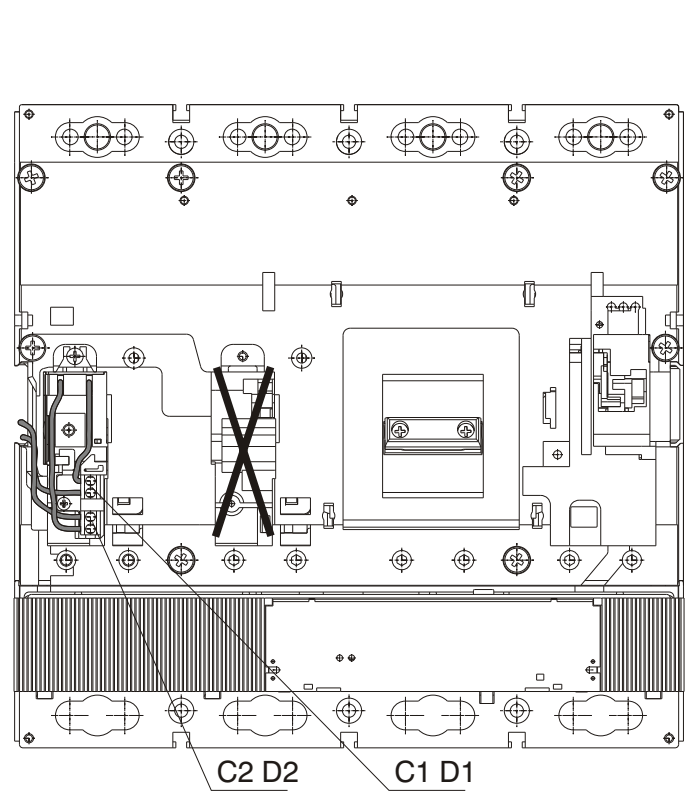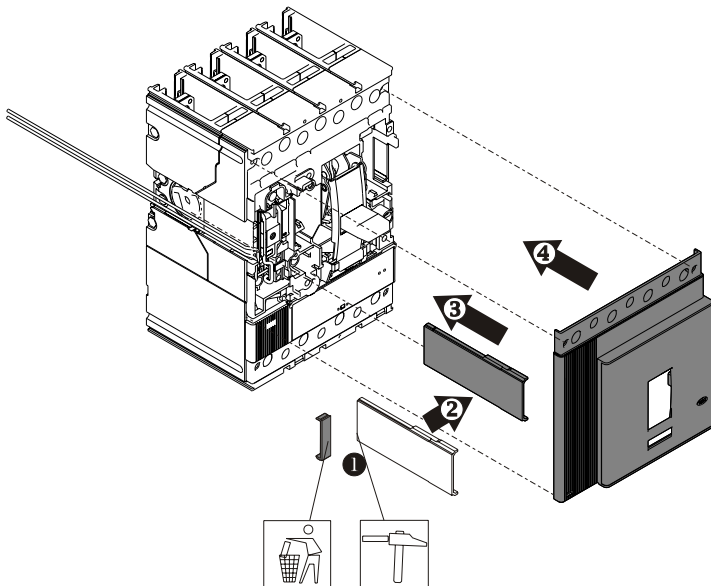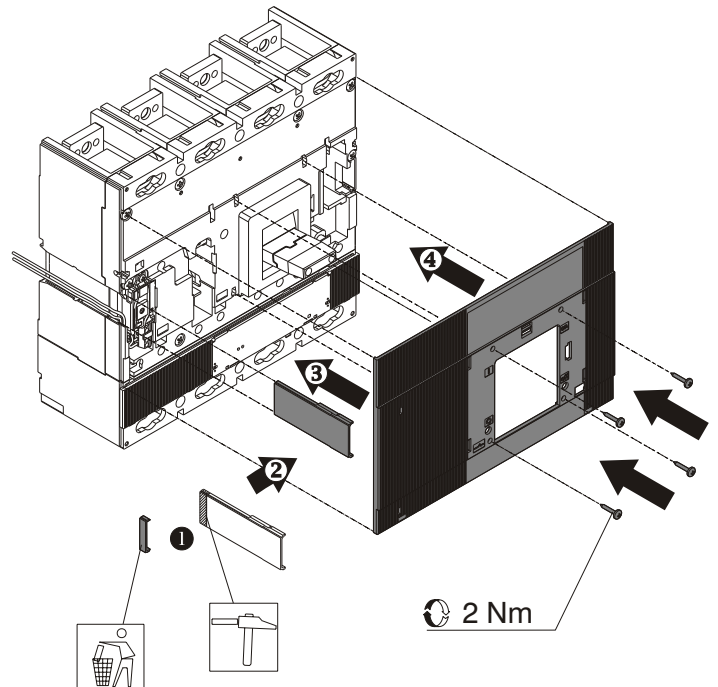N**T4-T5 IV****O****T6 IV****P****T4-T5 IV****Q****T6 IV**


R

T4-T5

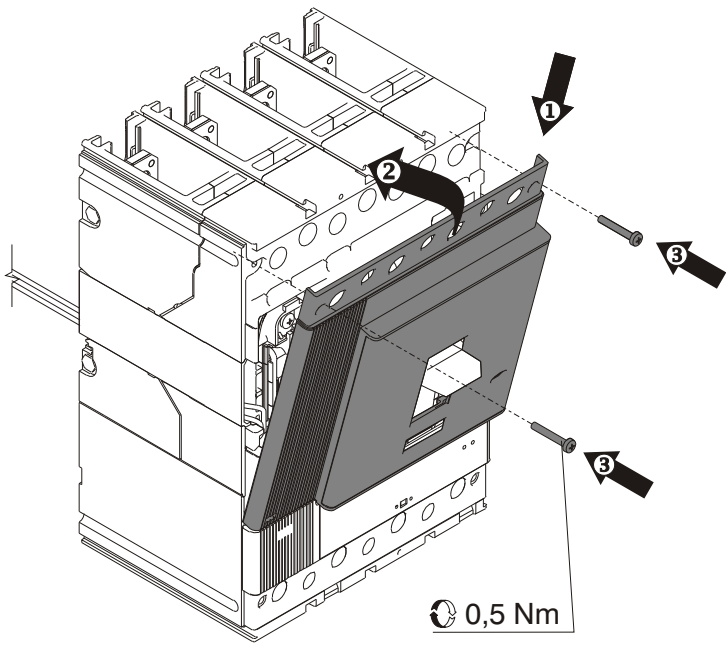

S

T6

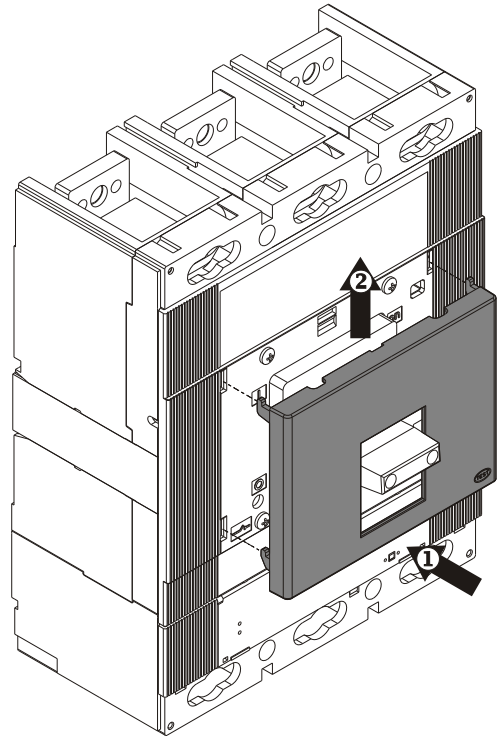

T

T4-T5-T6

