


SACE Tmax XT


PB - Separatori di fase XT1-XT2-XT3-XT4
 PB - Phase barriers XT1-XT2-XT3-XT4
 PB - Trennwände zwischen den Phasen XT1-XT2-XT3-XT4
 PB - Séparateurs de phase XT1-XT2-XT3-XT4
 PB - Separadores de fase XT1-XT2-XT3-XT4

XT1-XT2-XT3-XT4

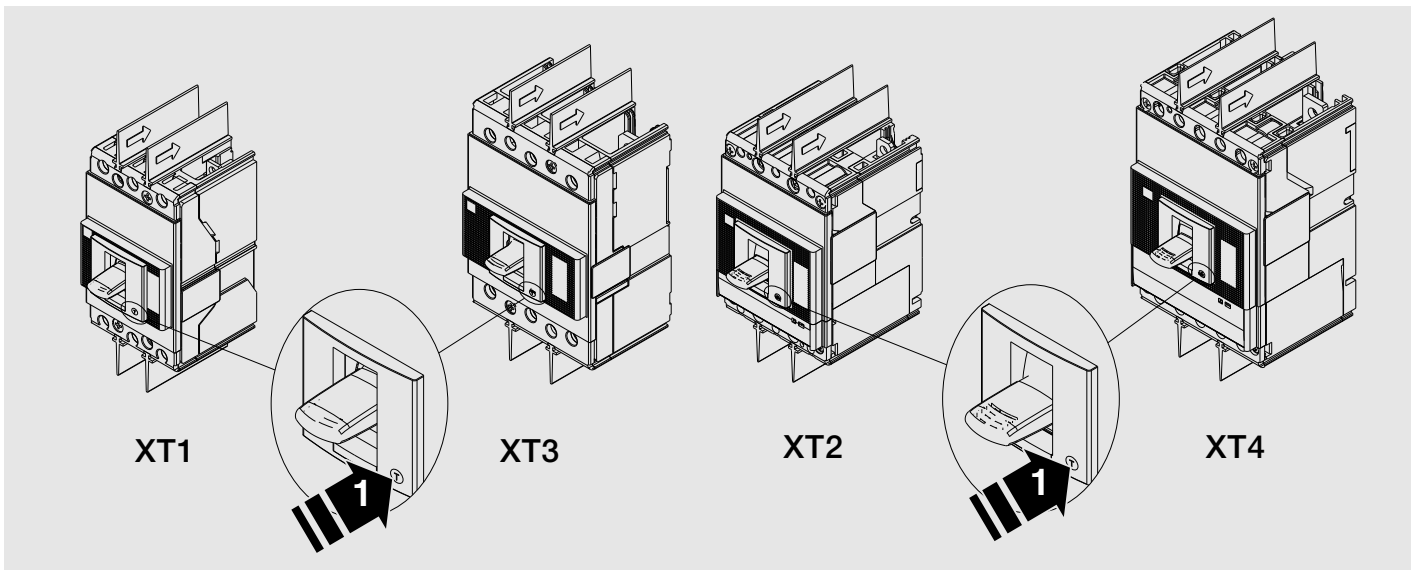


	III	IV	III	IV	III	IV
XT1	4	6	4	6	4	6
XT3	4	6	4	6	4	6

	III	IV	III	IV	III	IV
XT2	4	6	4	6	4	6
XT4	4	6	4	6	4	6

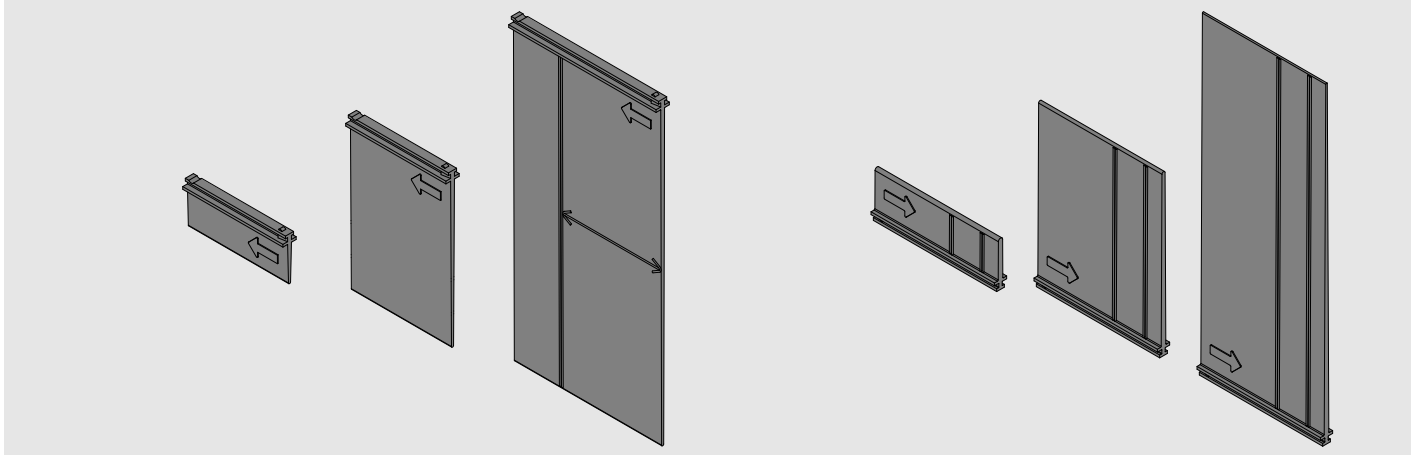


A


XT1 - XT3

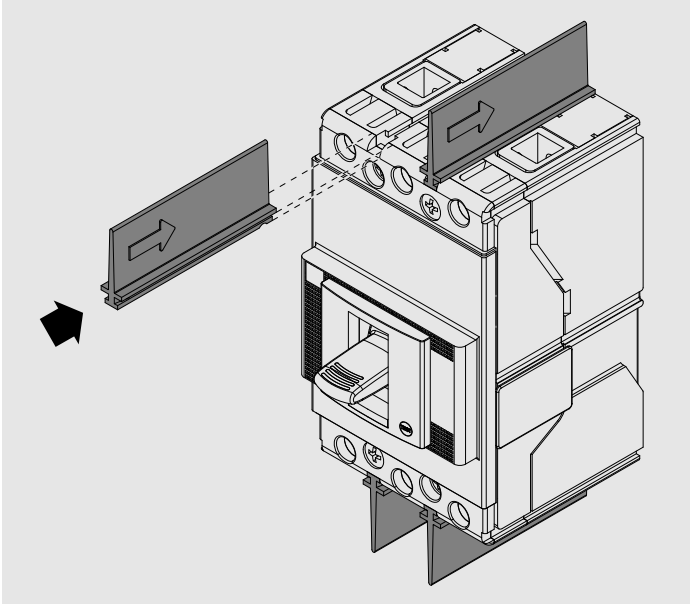**B**


XT1 XT3/EF

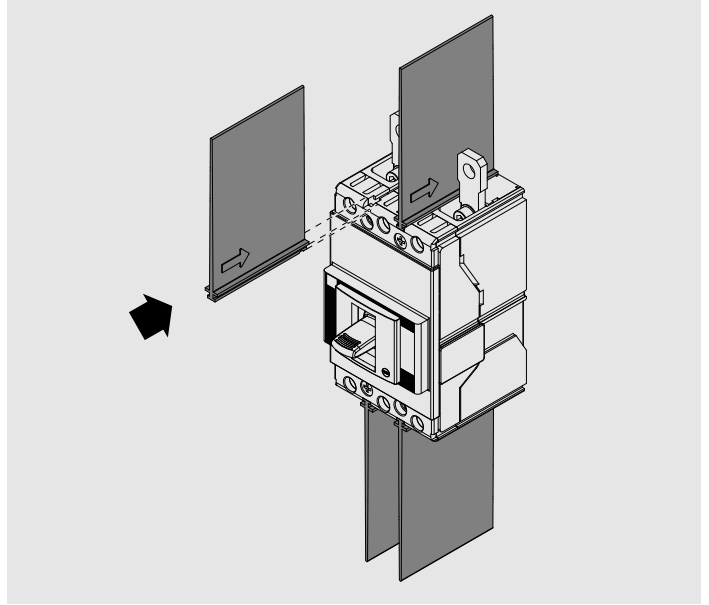**C**


XT1 - XT3/ F / ES

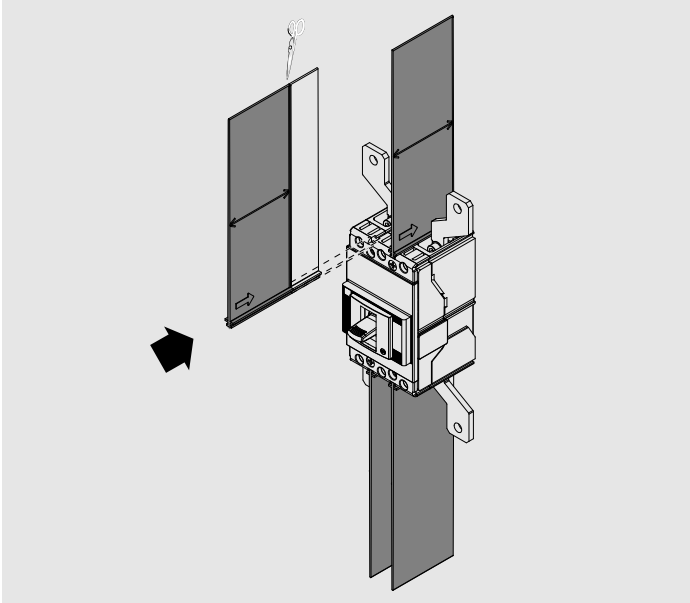**D**


XT1 - XT3/ P

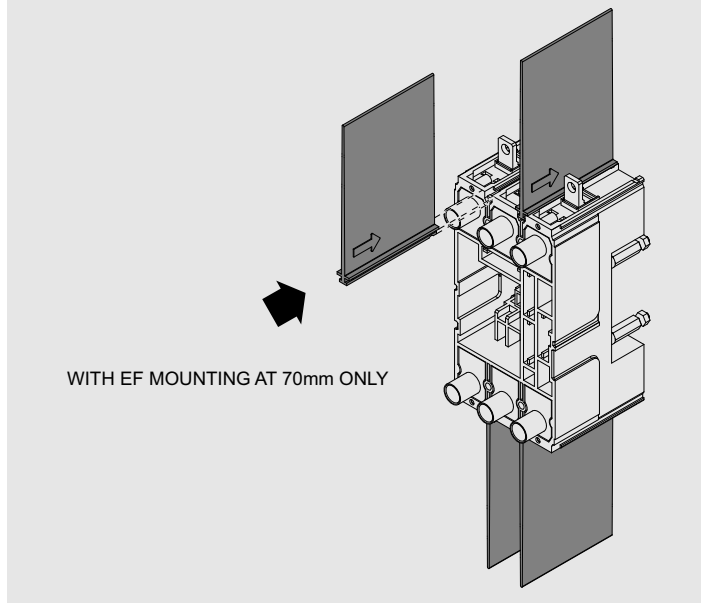**E**

XT1 - XT3

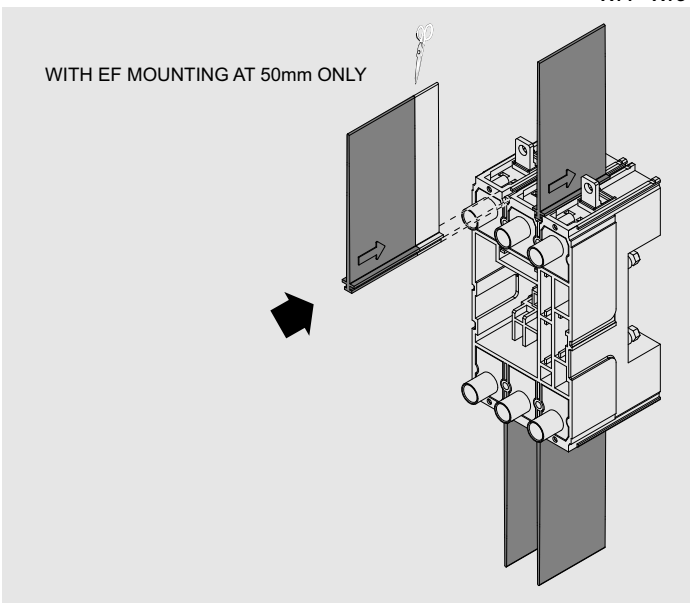
**F**

XT1 - XT3/ Fc Cu Al/ P

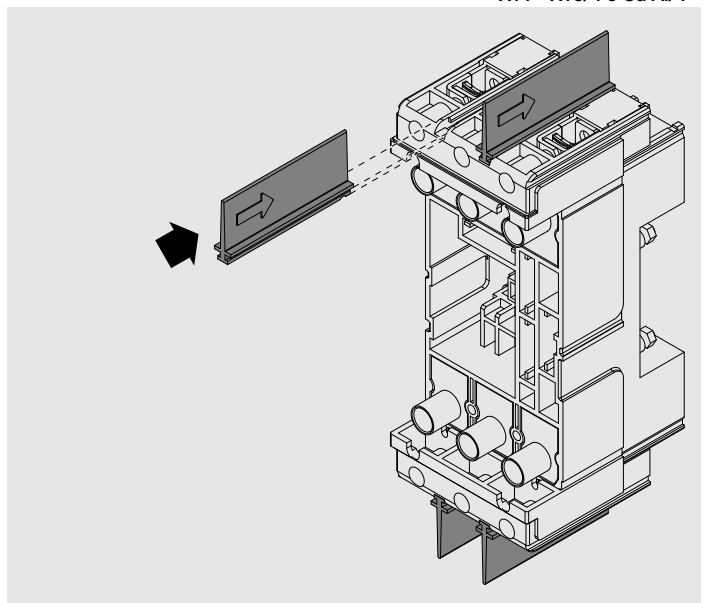


G

XT1 - XT3

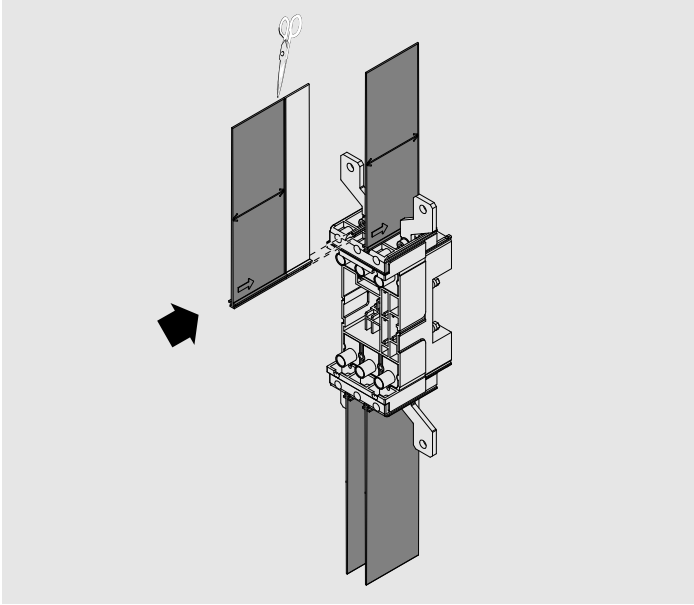


H

XT2 - XT4

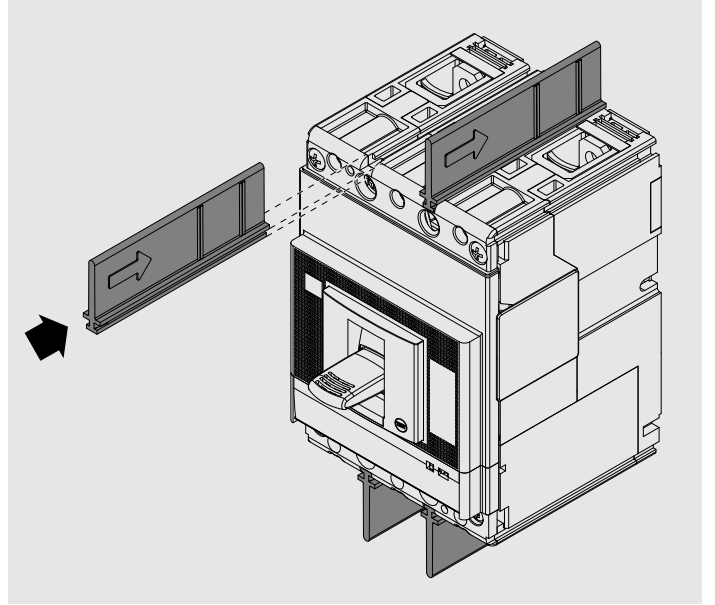


I

XT2 - XT4/EF

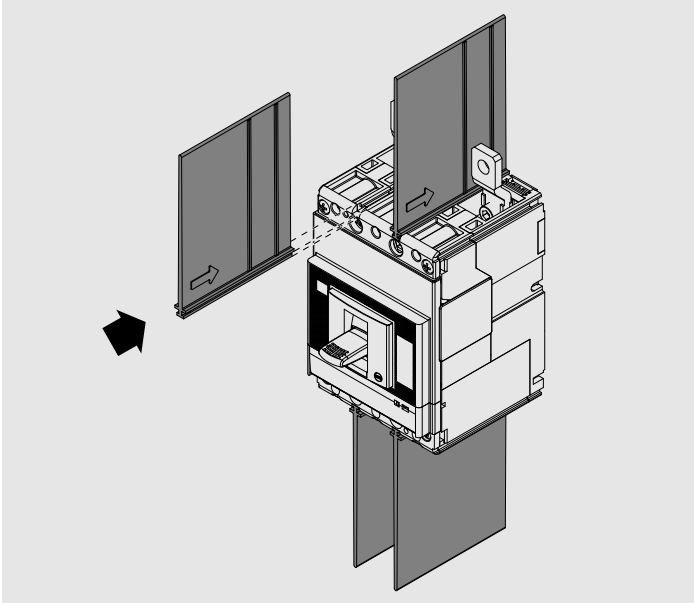


J

XT2 - XT4/ES

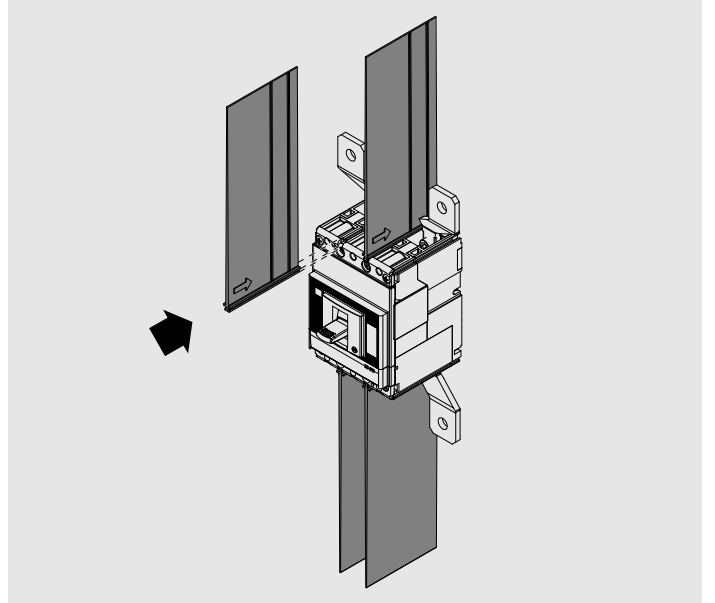


K

XT2 - XT4

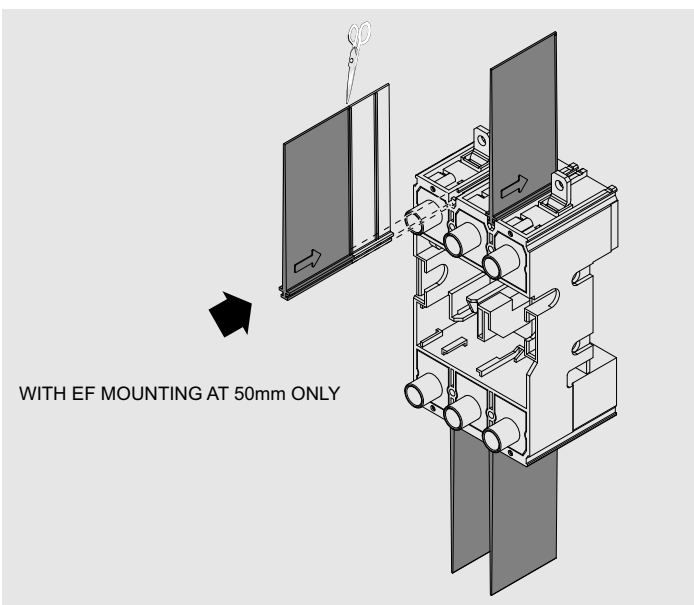


L

XT2 - XT4

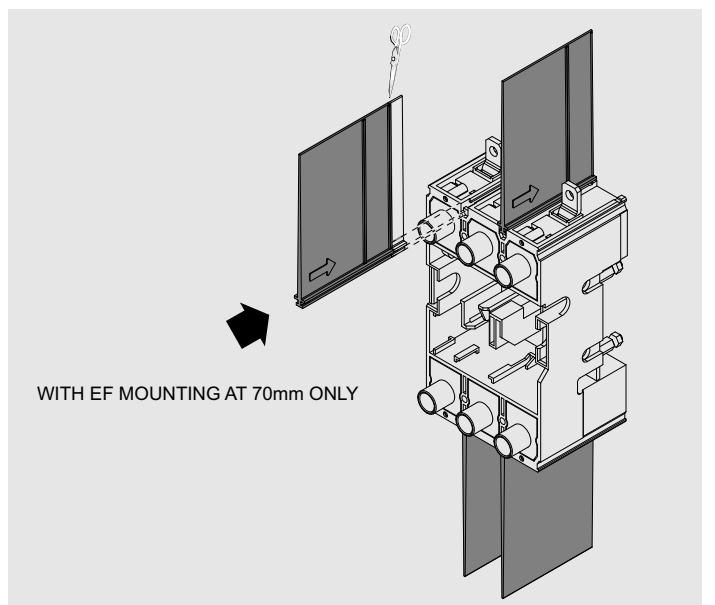


M

XT2 - XT4

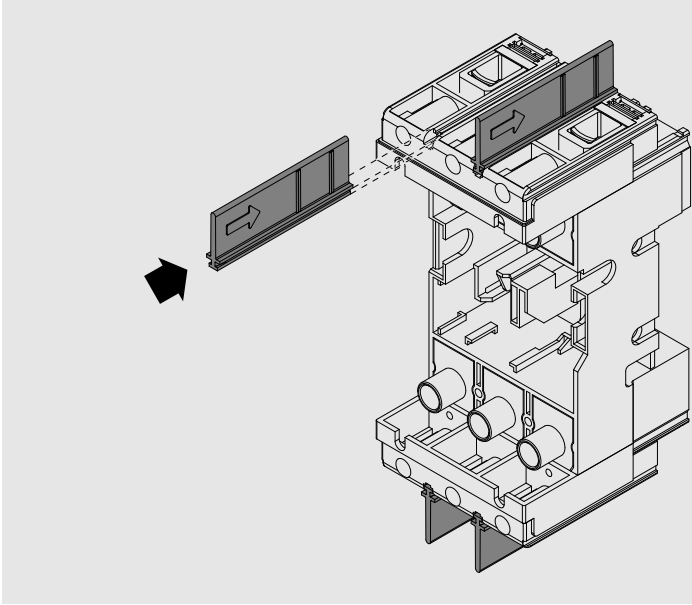**N**

XT2 - XT4

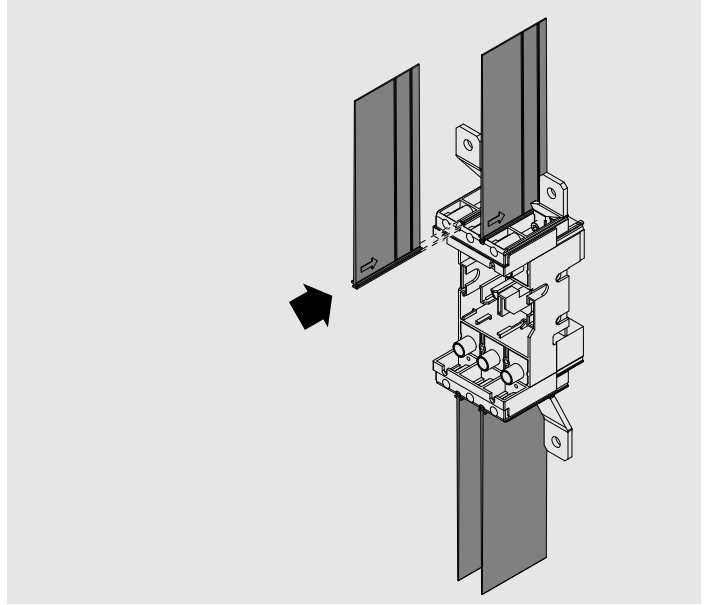

For more information please contact:

ABB S.p.A.

ABB SACE Division

Via Baioni, 35

24123 Bergamo - Italy

Phone: +39 035 395 111

Fax: +39 035 395 306 - 433

www.abb.com

Power and productivity
for a better world™

