 
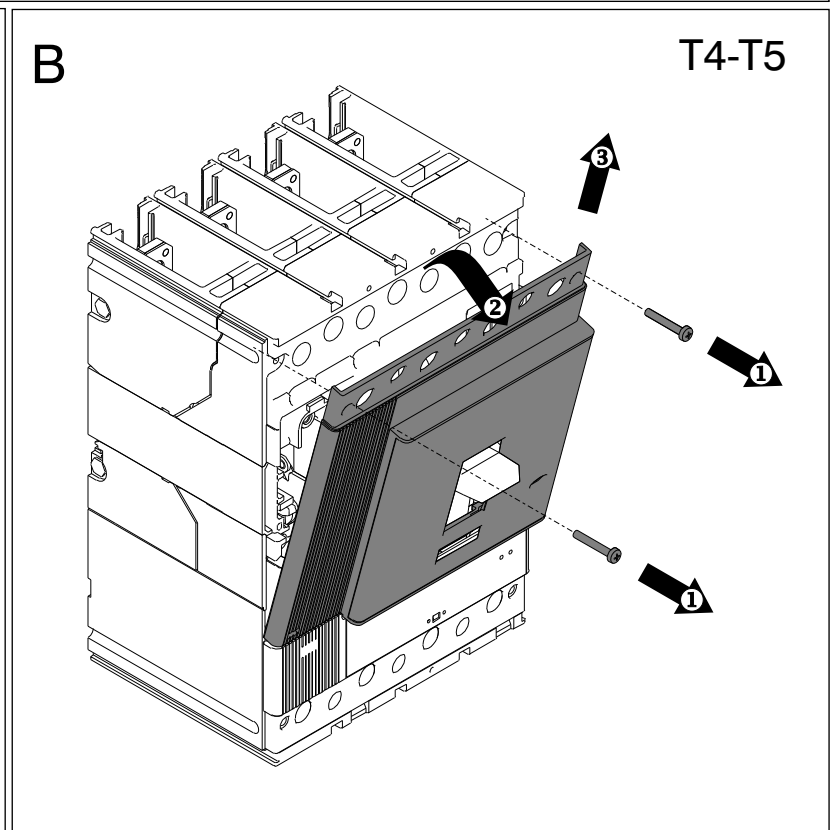 
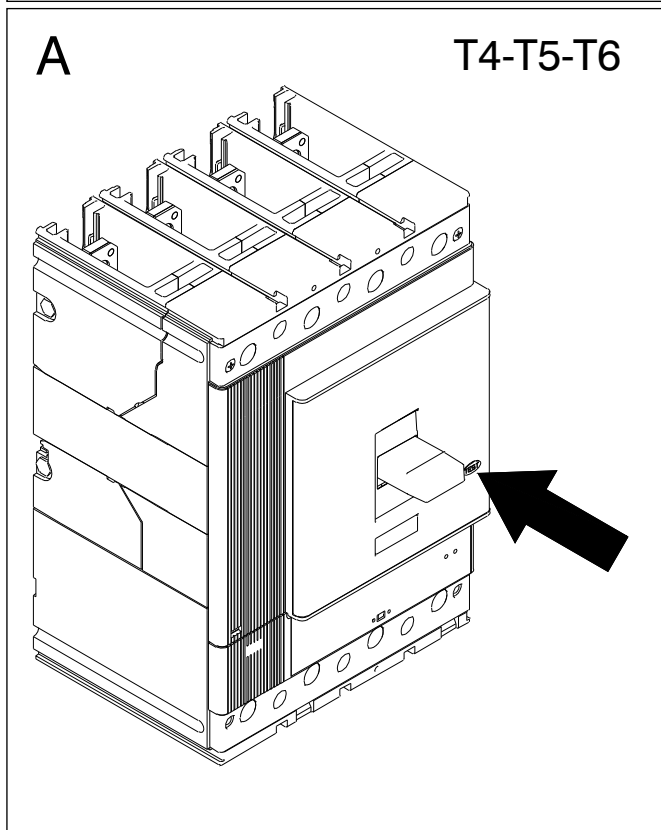 
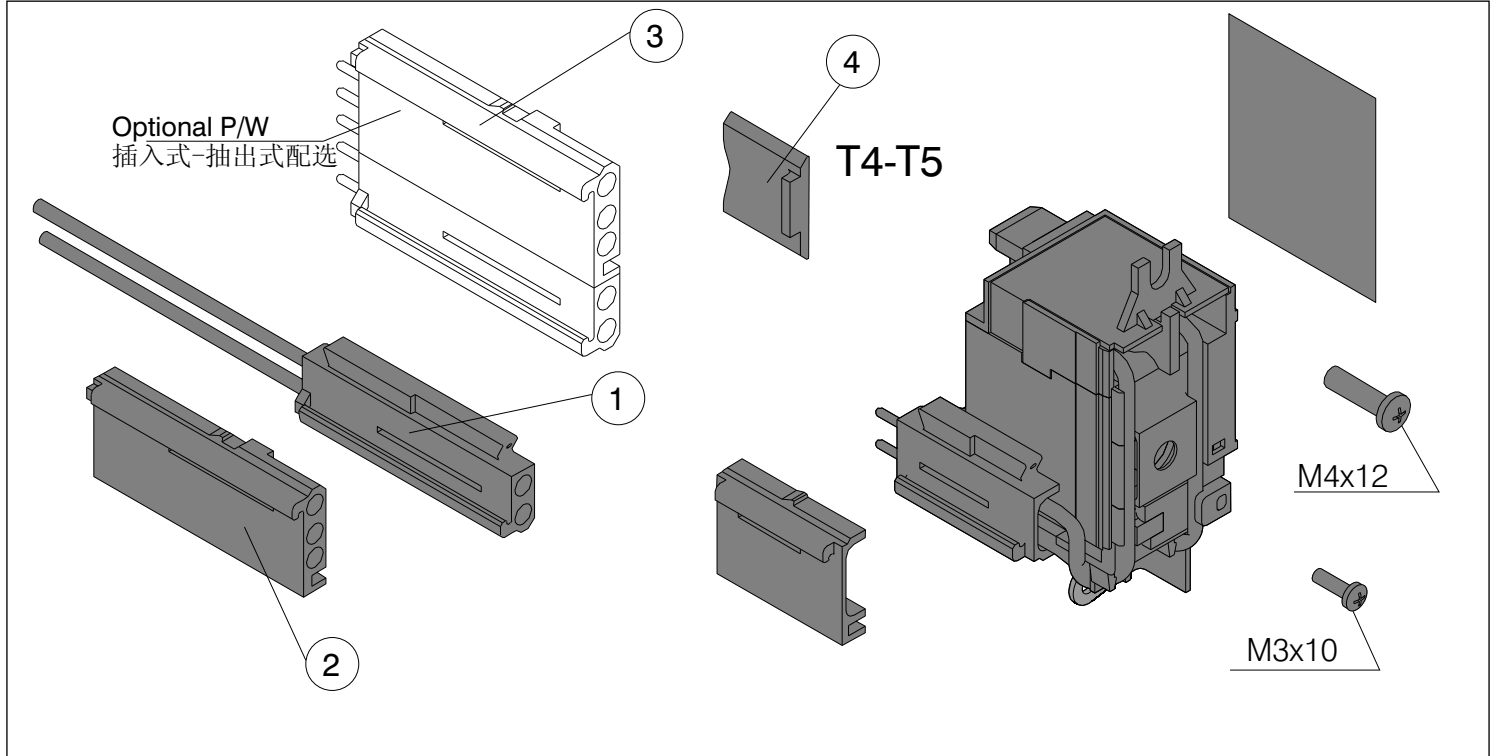 
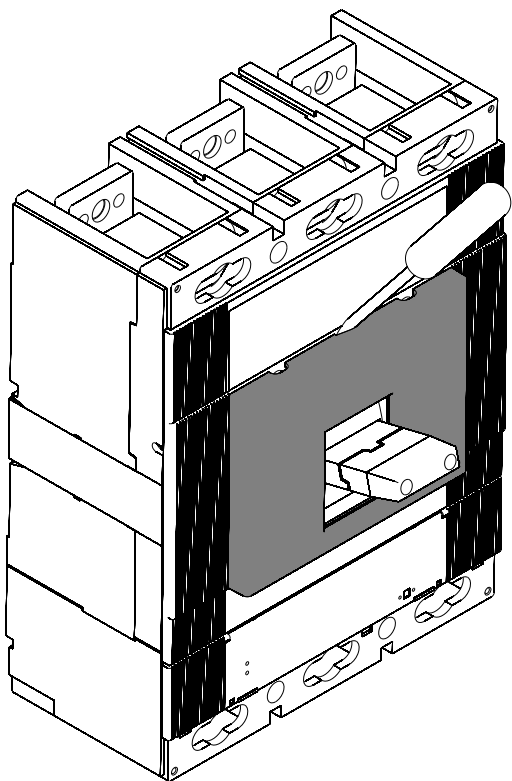 
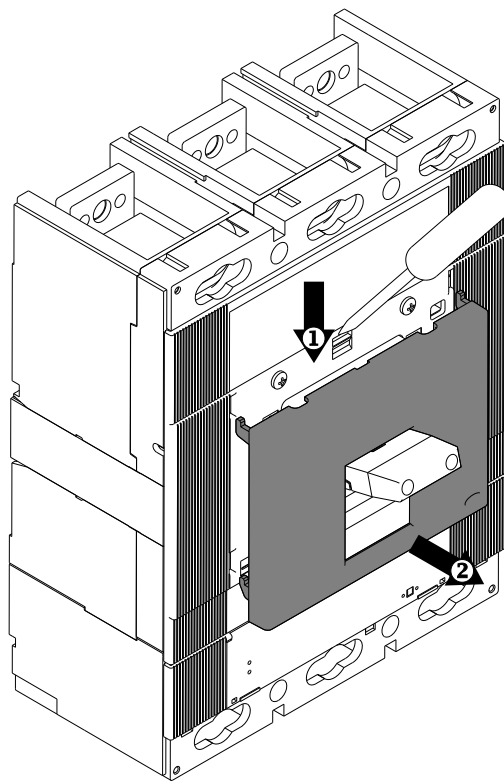 
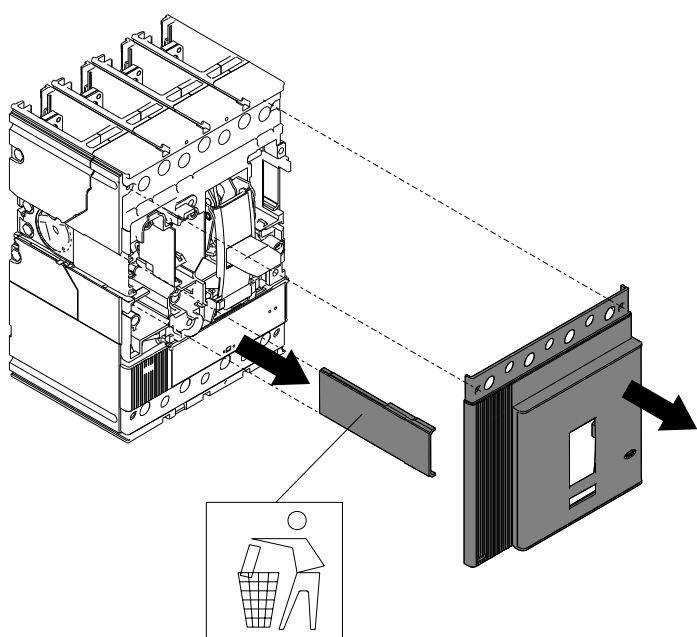 


Tmax

DOC. N.° 1SDH000436R0601 - L5324

 
- SOR-C/ UVR-C/ PS-SOR-C - Sganciatore di apertura/minima tensione cablato T4-T5-T6
- SOR-C/ UVR-C/ PS-SOR-C - T4-T5-T6 Wired opening /undervoltage release
- SOR-C/ UVR-C/ PS-SOR-C - Arbeitsstrom-/Unterspannungsauslöser, verdrahtet, T4-T5-T6
- SOR-C/ UVR-C/ PS-SOR-C - Déclencheur d'ouverture à émission/à minimum de tension câblé T4-T5-T6
- SOR-C/ UVR-C/ PS-SOR-C - Relé de apertura/tensión mínima cableado T4-T5-T6
- SOR-C/ UVR-C/ PS-SOR-C - T4-T5-T6 预接电缆型分闸/欠压线圈

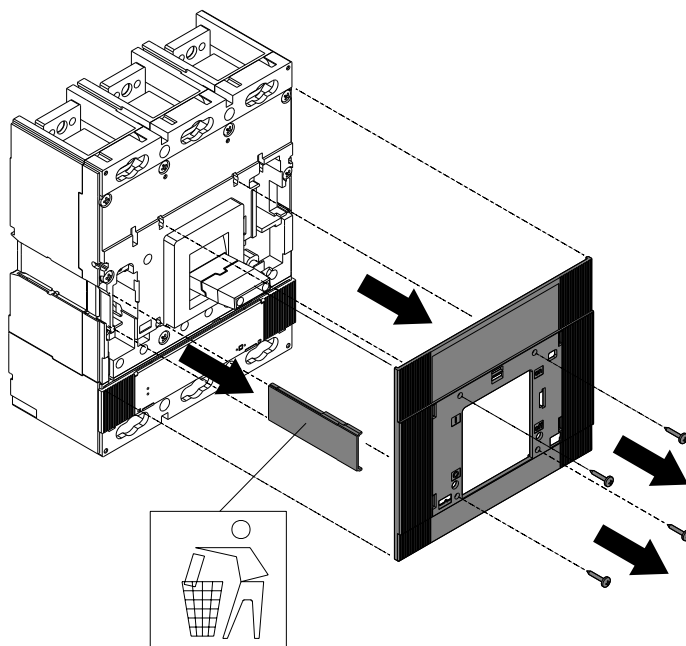

C**T6****D****T6****E****T4-T5****F****T6**


G

T4-T5-T6

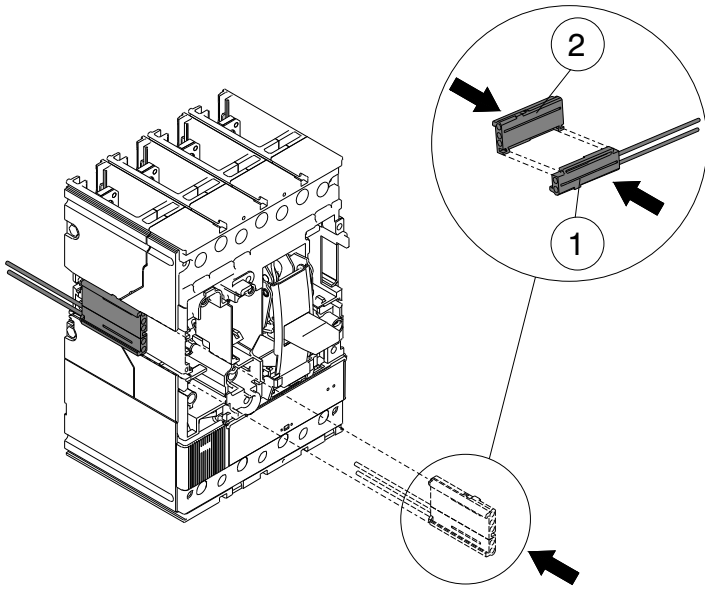


H

 T4-T5 P-W
T6 W

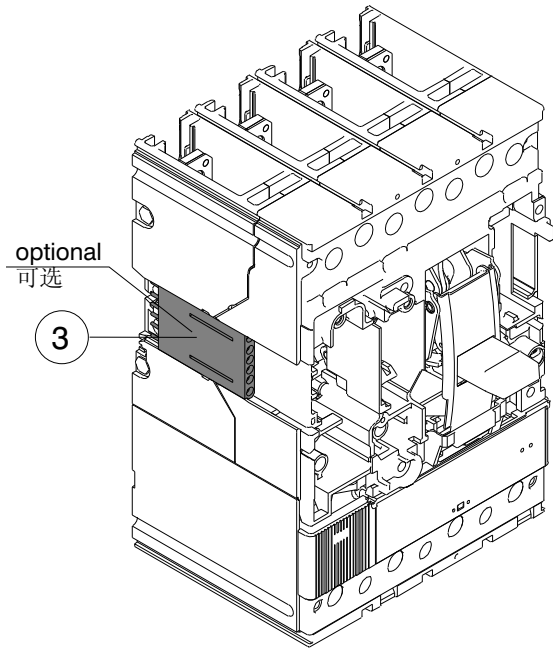

I

 T4-T5 III

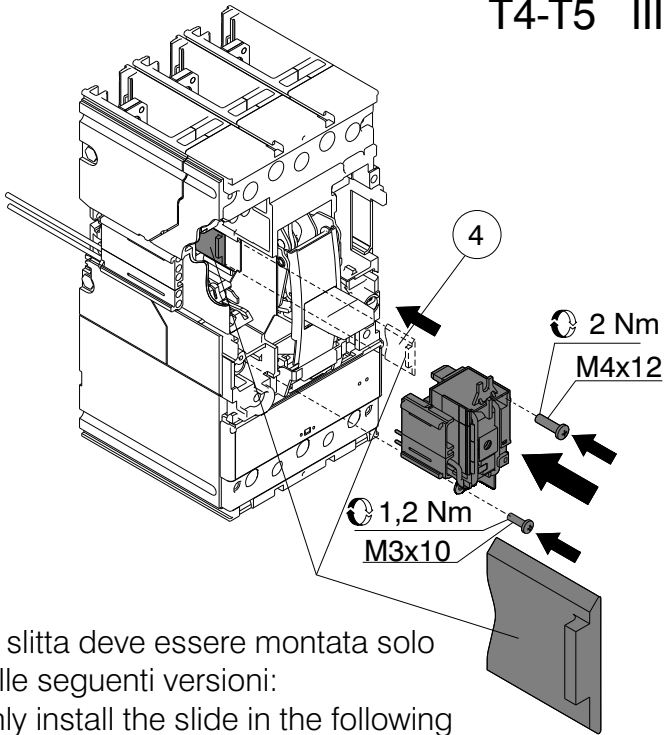


La slitta deve essere montata solo nelle seguenti versioni:
 Only install the slide in the following versions:
 Der Schlitten muss nur bei den folgenden Versionen montiert werden:
 Le rail ne doit être monté que dans les versions suivantes:
 Montar la corredera solamente en las siguientes versiones:

仅在以下型号断路器上安装此滑块:





T4	III	OK
T4	IV	NO
T5	III	OK
T5	IV	NO
T6	III	NO
T6	IV	NO

J

 T6 III

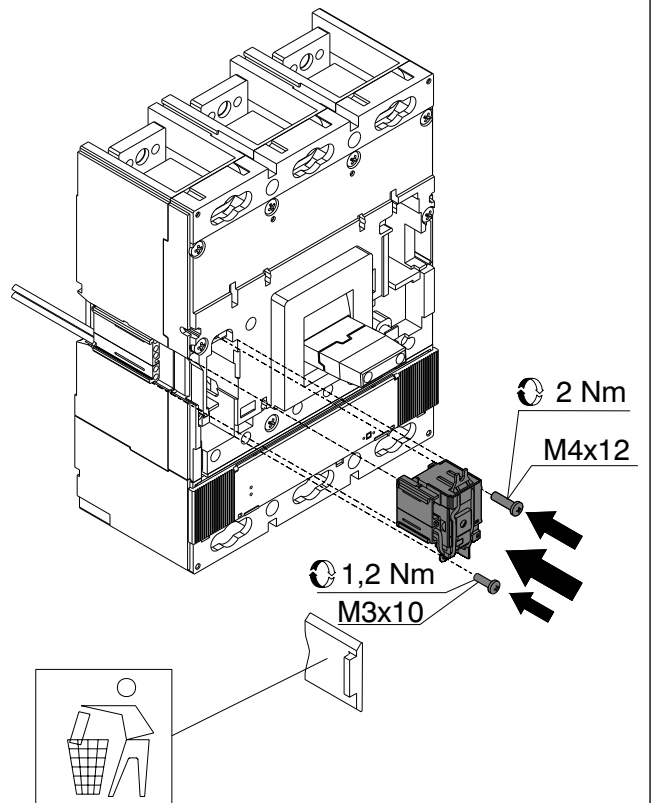


ABB

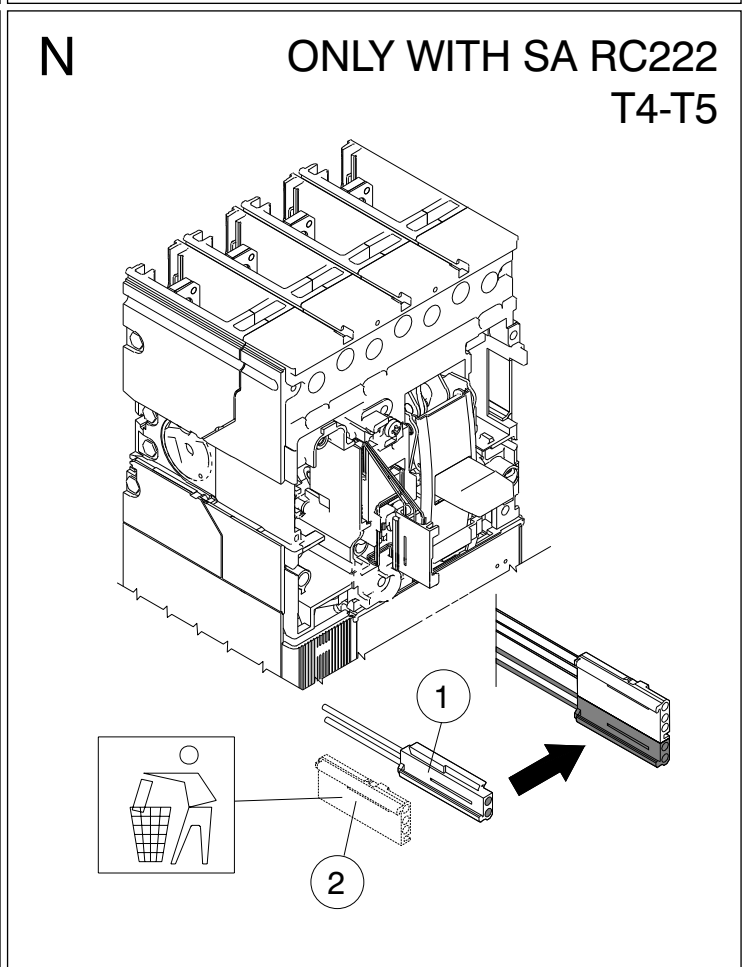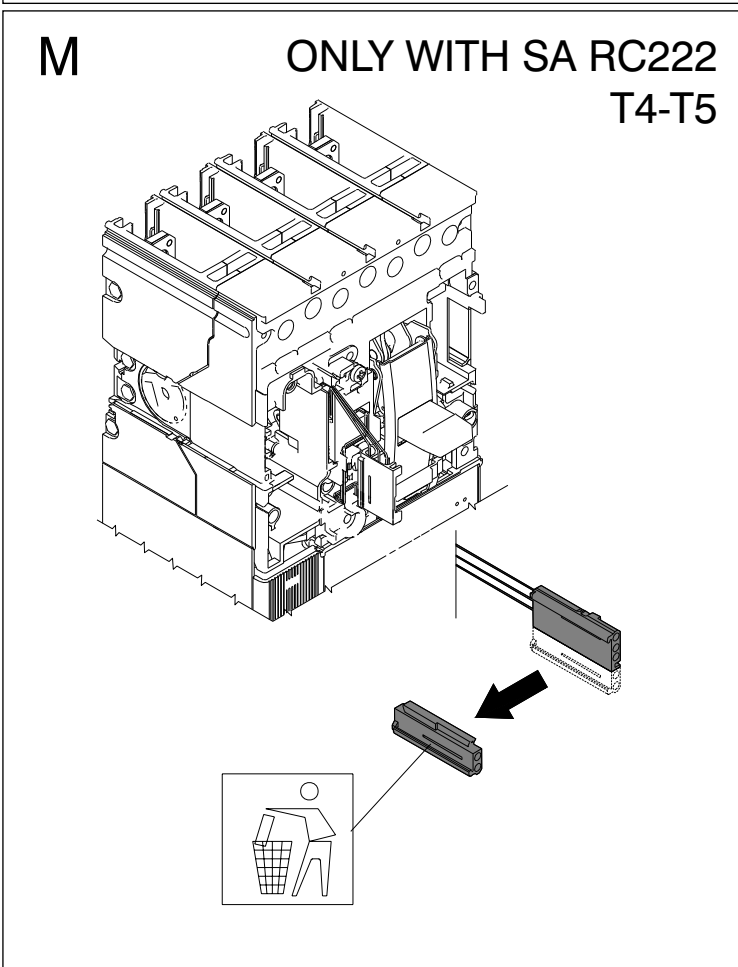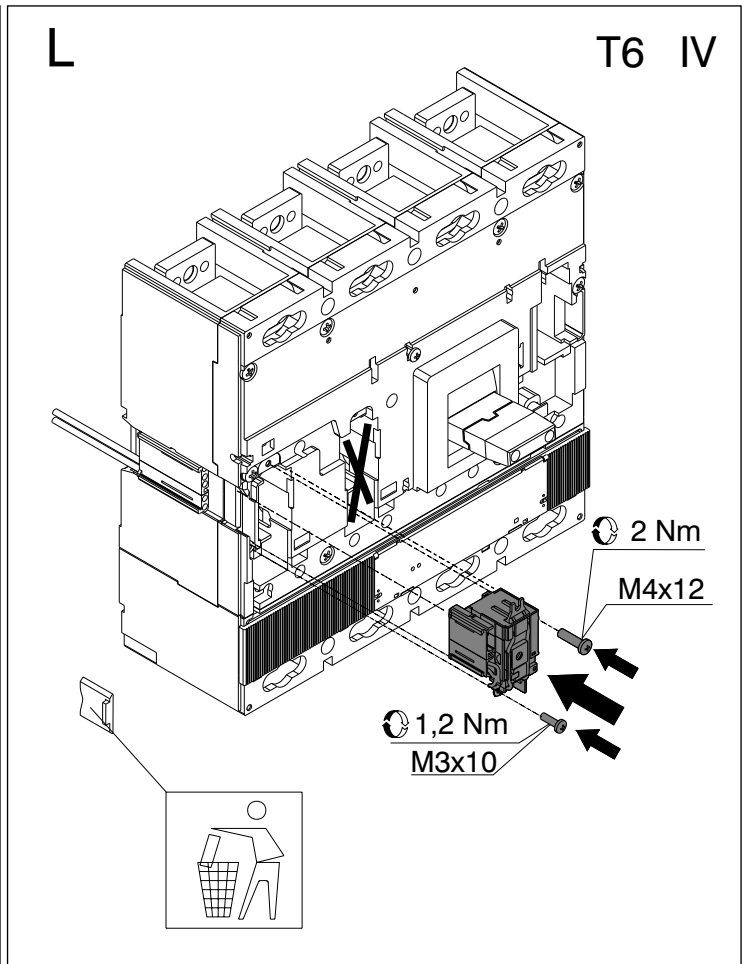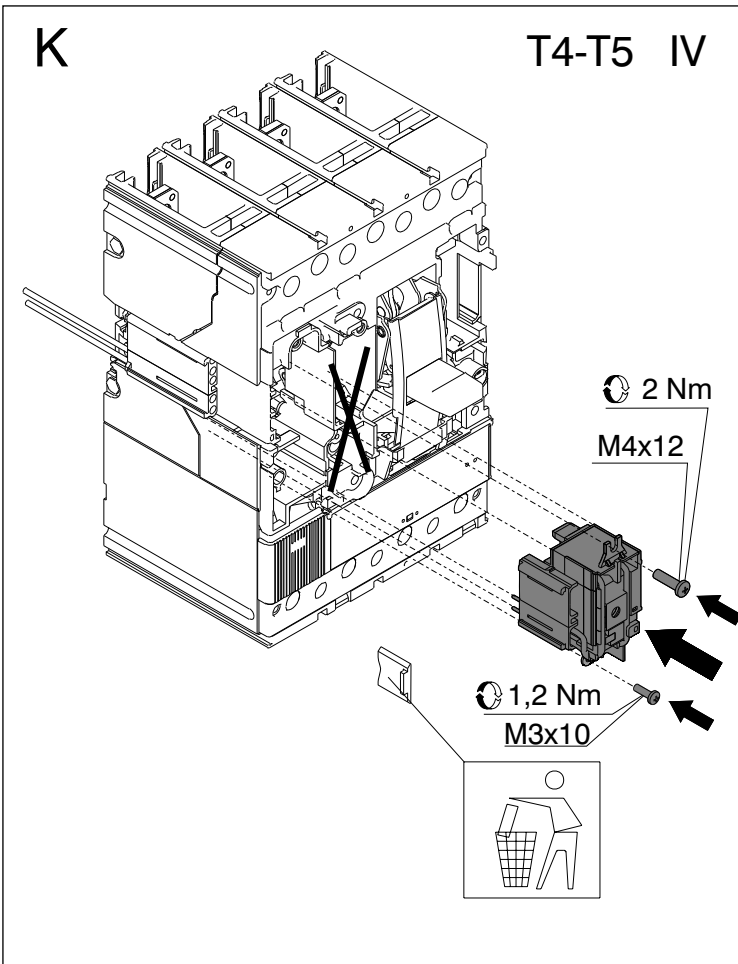    


O

 ONLY WITH SA RC222
T4-T5

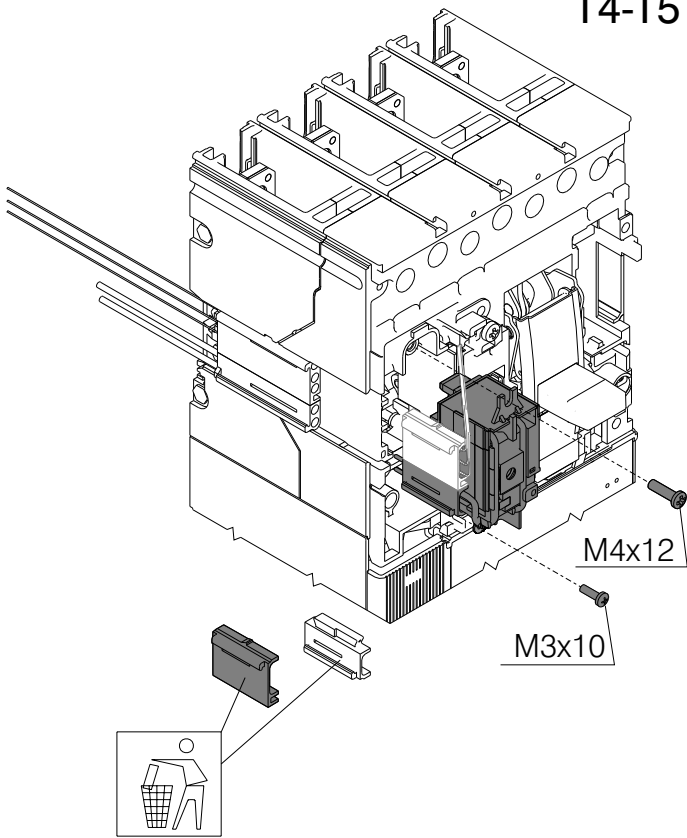


P

 T4-T5

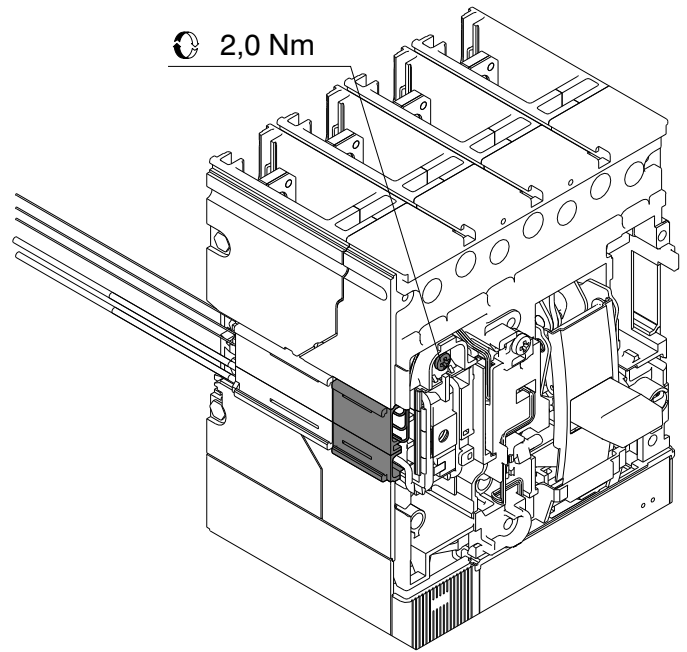


Q




 
T6

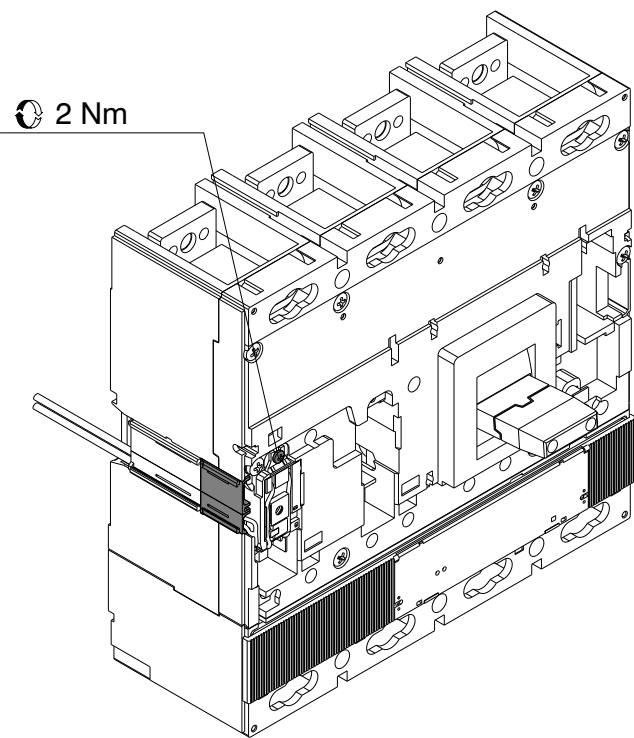

R

     
T4-T5

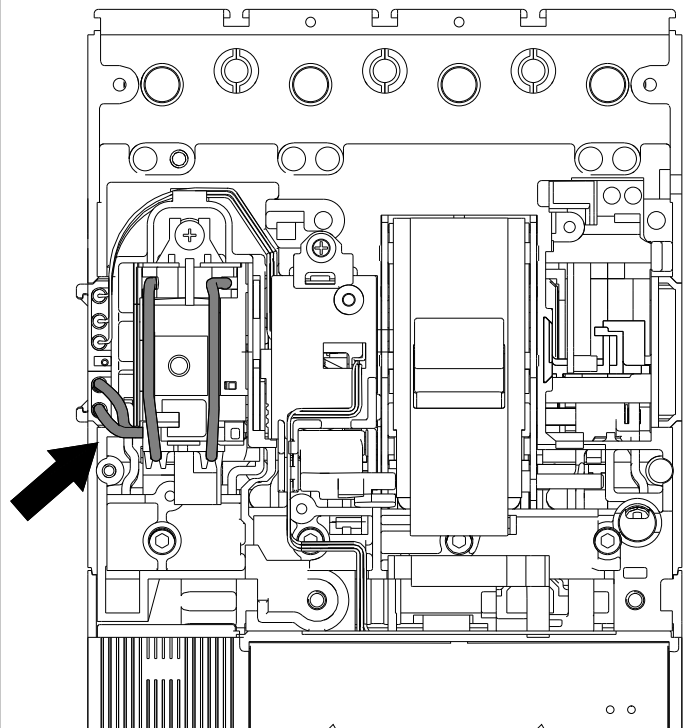

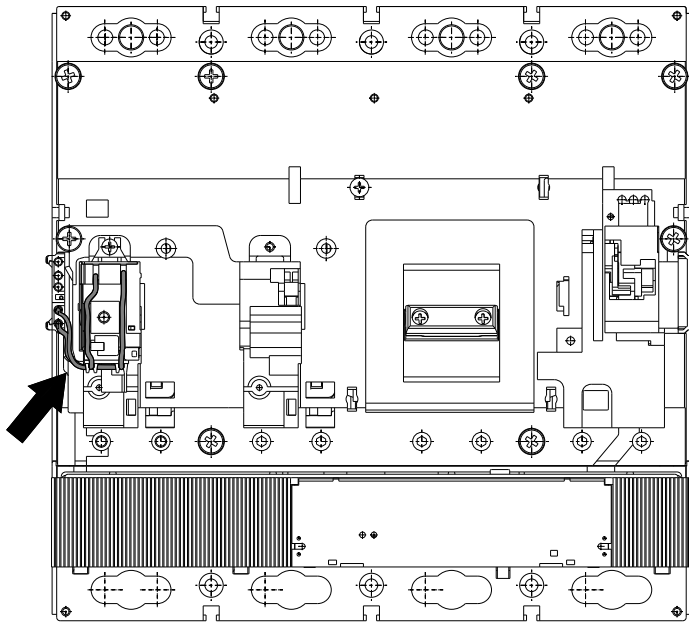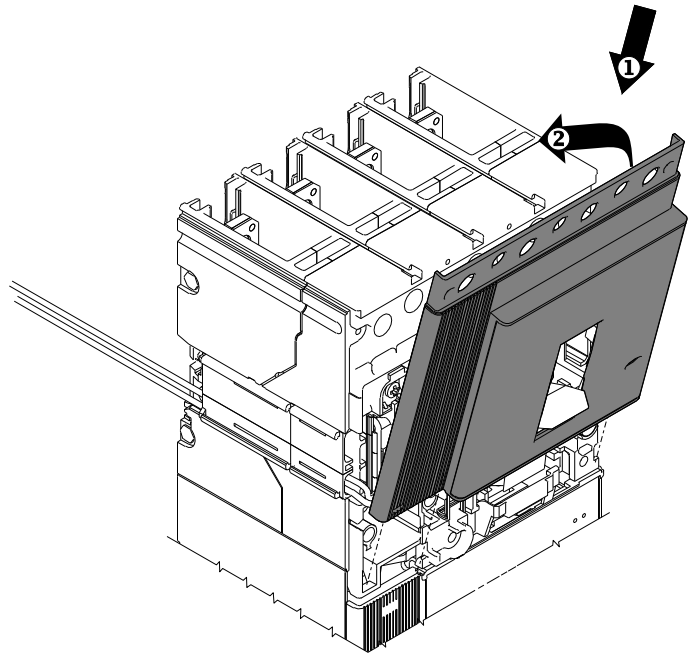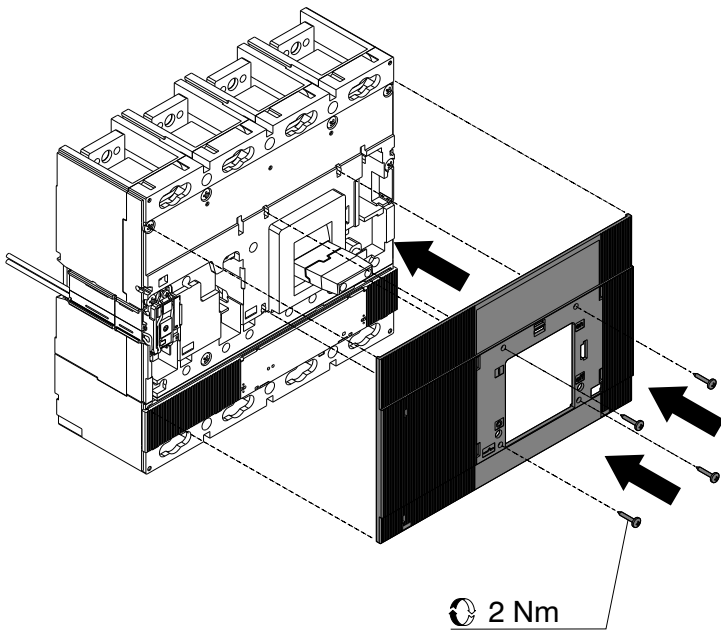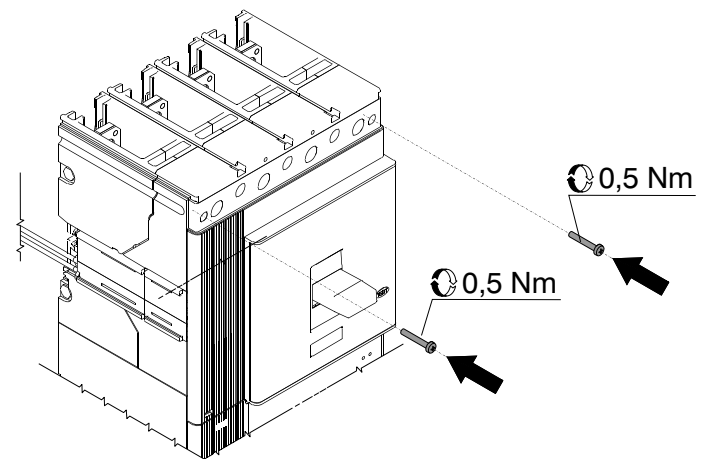S**T6****T****T4-T5****U****T6****V****T4-T5**


W

 T6

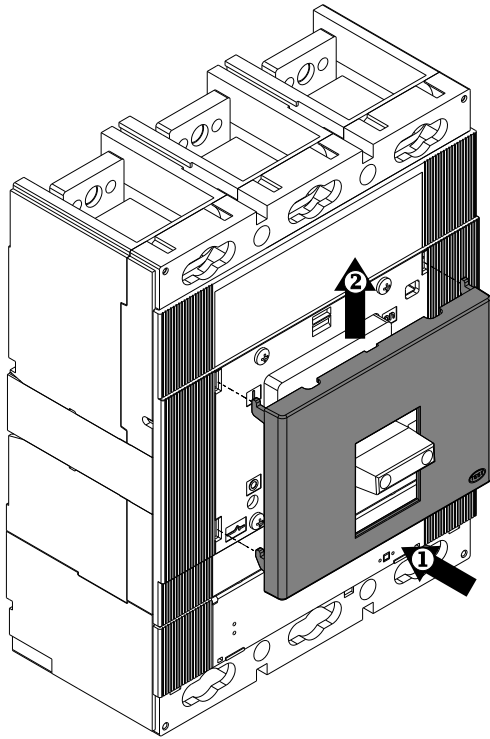


X

 
T4-T5 P-W
T6 W

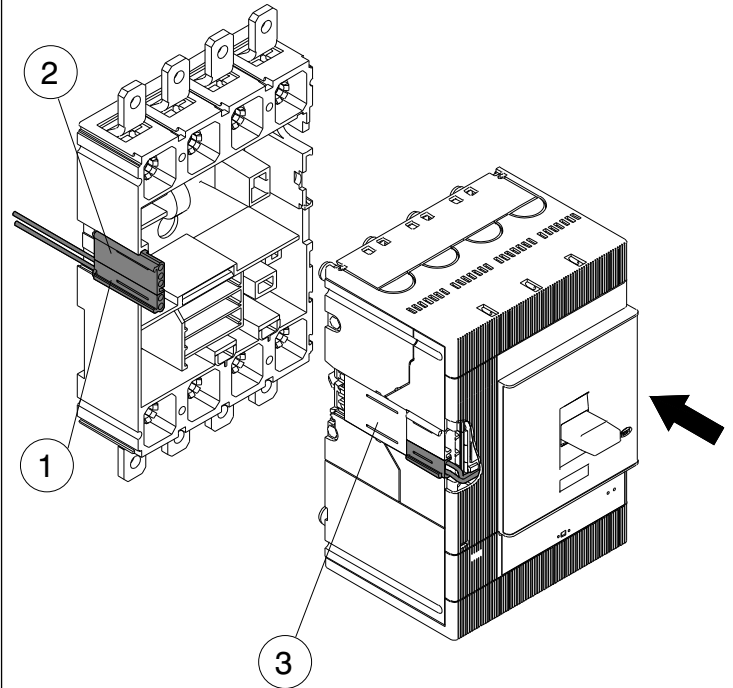

Y

  T4-T5-T6

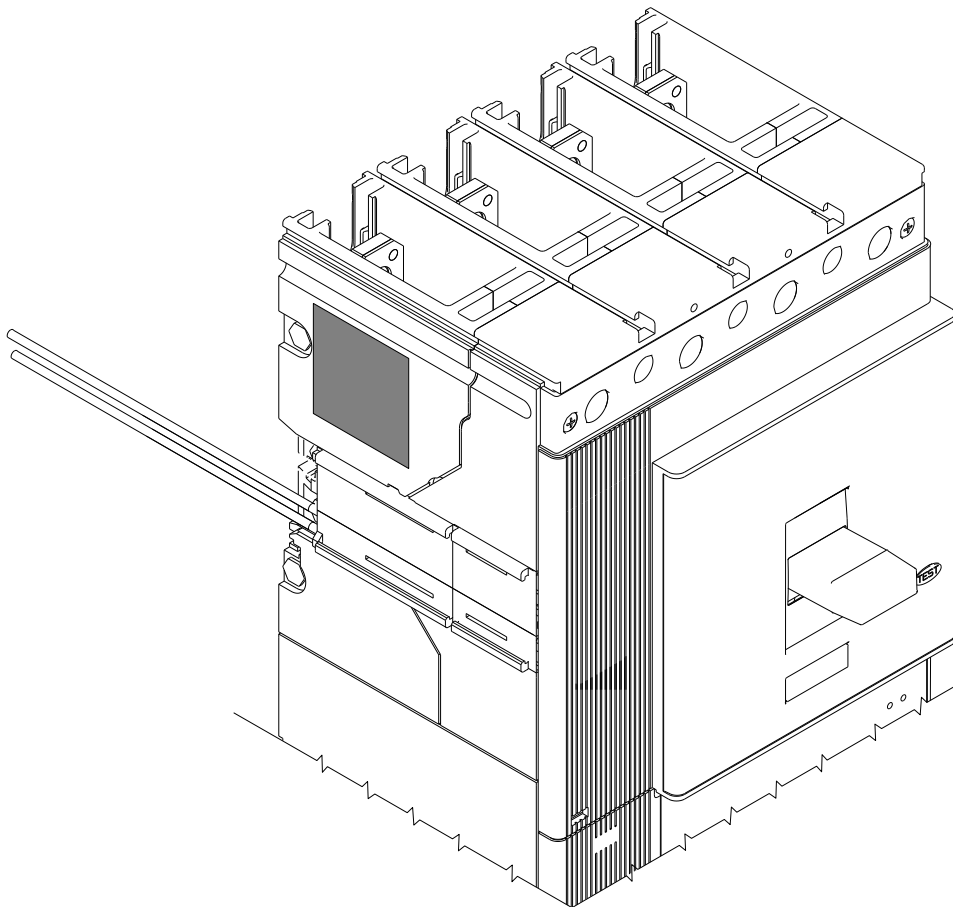

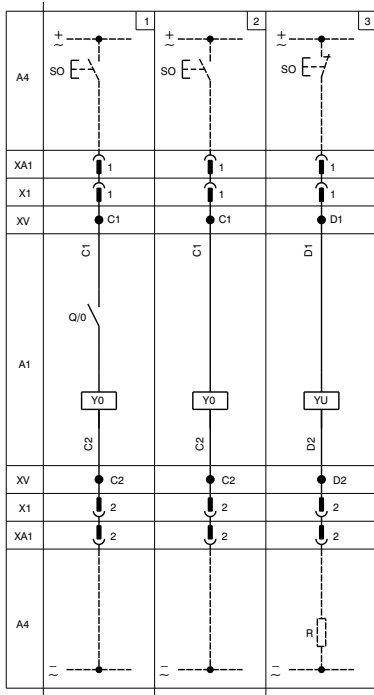

SO = Pulsante o contatto per l'apertura dell'interruttore
 SO = Pushbutton or contact for opening the circuit-breaker
 SO = Taster oder Schalter zum Öffnen des Leistungsschalters
 SO = Bouton-poussoir ou contact pour l'ouverture du disjoncteur
 SO = Pulsador o contacto para la apertura del interruptor
 SO = 断路器分闸按钮或触头

Q/0 = Contatti ausiliari dell'interruttore
 Q/0 = Auxiliary contacts of the circuit-breaker
 Q/0 = Hilfsschalter des Leistungsschalters
 Q/0 = Contacts auxiliaires du disjoncteur
 Q/0 = Contactos auxiliares del interruptor
 Q/0 = 断路器辅助触头

YO = Sganciatore di apertura
 YO = Opening release
 YO = Arbeitsstromauslöser
 YO = Déclencheur d'ouverture à émission
 YO = Relé de apertura
 YO = 分闸线圈

YU = Sganciatore di minima tensione
 YU = Undervoltage release
 YU = Unterspannungsauslöser
 YU = Déclencheur à minimum de tension
 YU = Relé de mínima tensión
 YU = 欠压线圈

R = Resistore
 R = Resistor
 R = Widerstand
 R = Resistance
 R = Resistencia
 R = 电阻