

Table of Contents

1	GENERAL	3
2	PRODUCT DESCRIPTION	3
2.1	PRODUCT OVERVIEW.....	3
2.2	TYPE DESIGNATION.....	4
3	INSTALLATION	4
3.1	STATUS LED	5
4	TROUBLE SHOOTING	5
4.1	RESET PORT	5
4.1.1	<i>Soft reset</i>	5
4.1.2	<i>Factory reset</i>	5
5	TECHNICAL DATA	6
5.1	DIMENSIONS.....	7
6	AUTOMATIC METER READING	7
7	THE WEB SERVER	7
7.1	ACCESSING THE WEB SERVER	8
7.2	USER MANAGEMENT	9
7.2.1	<i>Adding a user</i>	9
7.2.2	<i>Removing users</i>	10
7.2.3	<i>Configuring User Setting</i>	12
7.3	CONFIGURING ADAPTER SETTINGS.....	13
7.3.1	<i>Assigning IP-address statically</i>	13
7.3.2	<i>Assigning IP-address through DHCP-server</i>	14
7.3.3	<i>Timeout Configuration</i>	16
8	ABBREVIATIONS AND ACRONYMS	17
9	INDEX	18

© 2006-2007 by ABB AB. All rights reserved.

Trademarks

Microsoft, Internet Explorer, Windows, and Windows NT are registered trademarks of Microsoft Corporation. Other brand and product names are registered trademarks or trademarks of their respective holders.



- Status LED.

2.2 TYPE DESIGNATION

Below are tables with explanation for all positions in the type designation for the SCA.

Type	Pos 1	2	3	4	5	6-8
Basic						
Serial Communication Adapters	C					
Media						
Power Line, Band A		A				
Power Line, Band C		C				
Ethernet		E				
GSM/GPRS		G				
RS 232		R				
Twisted Pair		T				
Protocol						
LonWorks			L			
M-Bus			M			
				0		
Supply voltage						
Powered by device					4	
100 - 240 V					5	
220 - 240 V					6	
Optional functionality						
No options						000

Table 1: Type designation of ABB Serial Communication Adapters.

3 INSTALLATION

- Disconnect the power supply.
- Strip the wires and connect them to the top terminals of the SCA.
- Connect the Ethernet cable to the RJ-45 LAN interface of the SCA, which is located on the bottom of the SCA.
- Place the SCA to the left of the meter and snap it on the DIN-rail.
- Verify that the SCA is correctly wired and the voltage is according to the technical specification before the power is turned on.
- Verify that the status LED is green to ensure link and that the power is on.

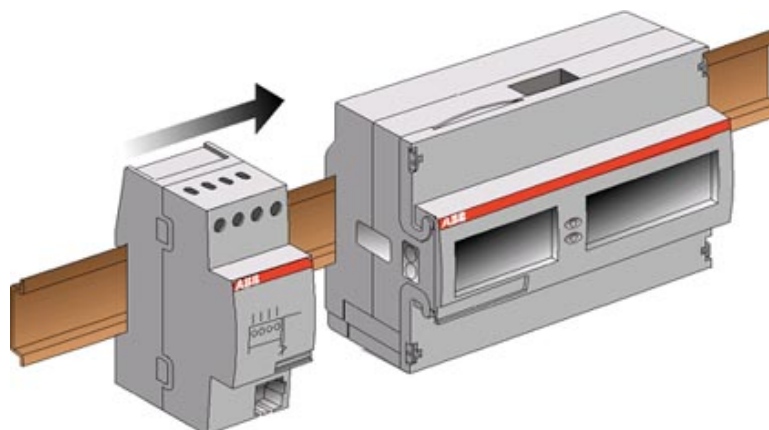


Figure 2: Installation of the SCA.

3.1 STATUS LED

The status LED 1. of figure 1. indicates the state of the SCA. The chart below describes the state of the SCA and how the status LED indicates this.

Status LED	SCA Status
Green	Link has been established and OK.
Flashing Green	Transferring data.
Off	No link established.
Red	Fatal Error.

Table 2: Table over the status LED indication.

4 TROUBLE SHOOTING

Status LED	Cause	Corrective actions
Off	No link.	Please check the connection of the network cable.
Off	No power to SCA.	Please check the connection of the power line.
Red	Fatal error.	Please contact your dealer.

Table 3: Trouble shooting guide.

4.1 RESET PORT

The SCA is also equipped with a Reset port 7 in figure 1. which can be used to perform a soft reset or a factory reset. Reset is performed by short circuit the two holes in the reset port. Below follows a description over the different reset procedures and how these are performed.

4.1.1 SOFT RESET

By performing a soft reset means to reset the SCA without restoring the settings of the adapter to the default factory settings. To perform a soft reset, short circuit the holes in the reset port with e.g. a paper clip, for 10 seconds and remove the paper clip.

4.1.2 FACTORY RESET

By performing a factory reset means to reset the SCA and restore the settings of the adapter to the default factory settings. To perform a factory reset, short circuit the holes in the reset port with e.g. a paper clip for more than 40 seconds and remove the paper clip.

5 TECHNICAL DATA

Network Protocol and Standards Compatibility

Data protocols:

TCP/IP, UDP, DHCP.

Power Supply

Nominal voltage:

100-240 V AC

Voltage range:

-20 % to +15 % of nominal voltage.

Frequency:

50/60 Hz \pm 5 %

Power consumption:

0.80 VA at 230 V AC, 50 Hz.

Terminal wire area:

0 – 2.5 mm²

Recommended tightening torque:

0.5 Nm

Mechanical Data

Casing material:

Polyamide

Protection class:

IP 20

Weight:

90 g

Environmental Specifications

Operating temperature range:

-40 °C to +55 °C

Storage temperature range:

-40 °C to +70 °C

Humidity:

75% yearly average

95% on 30 days/year

Interface Specifications

LAN:

10BASE-T, 10 Mbps

Connection interface:

RJ-45

Standards

Safety:

DIN EN 50090-2-2.

5.1 DIMENSIONS

The physical dimensions of the SCA are displayed below.

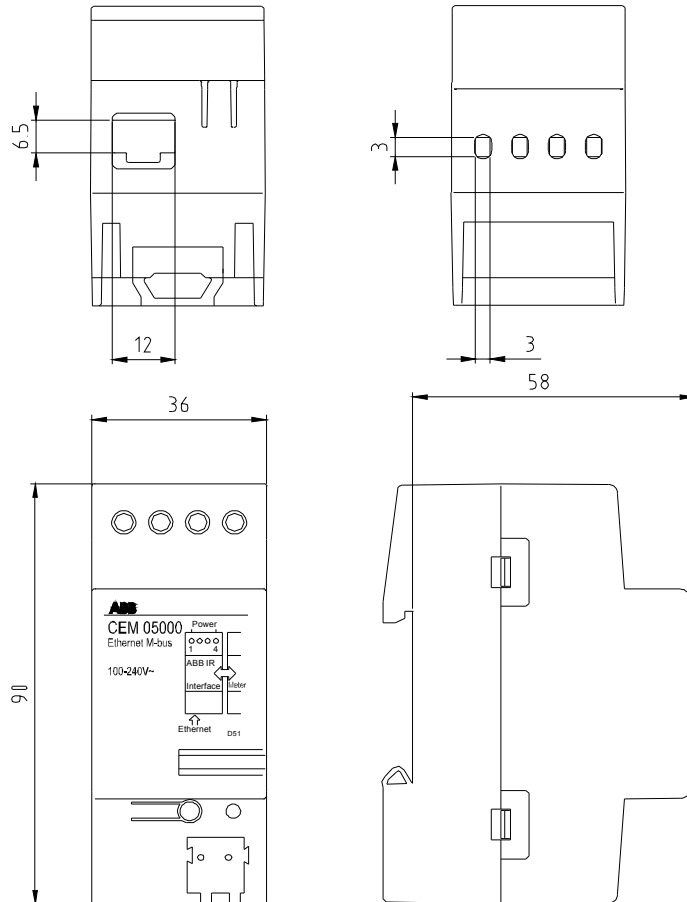


Figure 3: The physical dimensions of the SCA.

6 AUTOMATIC METER READING

The ABB Ethernet communication adapter provides Automatic Meter Reading (AMR) using M-Bus protocol over UDP or TCP through a LAN-network or the internet. This is done transparently without altering the original M-Bus telegrams. Please note that the shortest time between readouts is different depending on the type of the electricity meter; please refer to the User's Manual of the electricity meter for more information.

7 THE WEB SERVER

Besides providing communication with an AMR-system the ABB Ethernet communication adapter does also have a built-in Web-server that enables static meter reading over a LAN-network or internet using an ordinary web browser. The web-server provides an easy interface to configure the settings of the adapter and its users and privileges. The adapter's IP-address can be assign either statically or dynamically by a DHCP-server.

All quantities that can be readout by using the M-Bus protocol on the AMR part of the adapter can be readout on the built-in web server except the features that are listed below.


- Load Profile Values.
- Maximum Demand.
- Voltage Event Log.

Please refer to the User's Manual of the electricity meter for more information of what quantities that can be readout depending on the type of electricity meter.


7.1 ACCESSING THE WEB SERVER

This section will describe how to access the built-in web server in ABB Ethernet communication adapter.

Open a web browser and type the IP-address (default: 192.168.1.10) of the ABB Ethernet communication adapter in the web browsers address field.

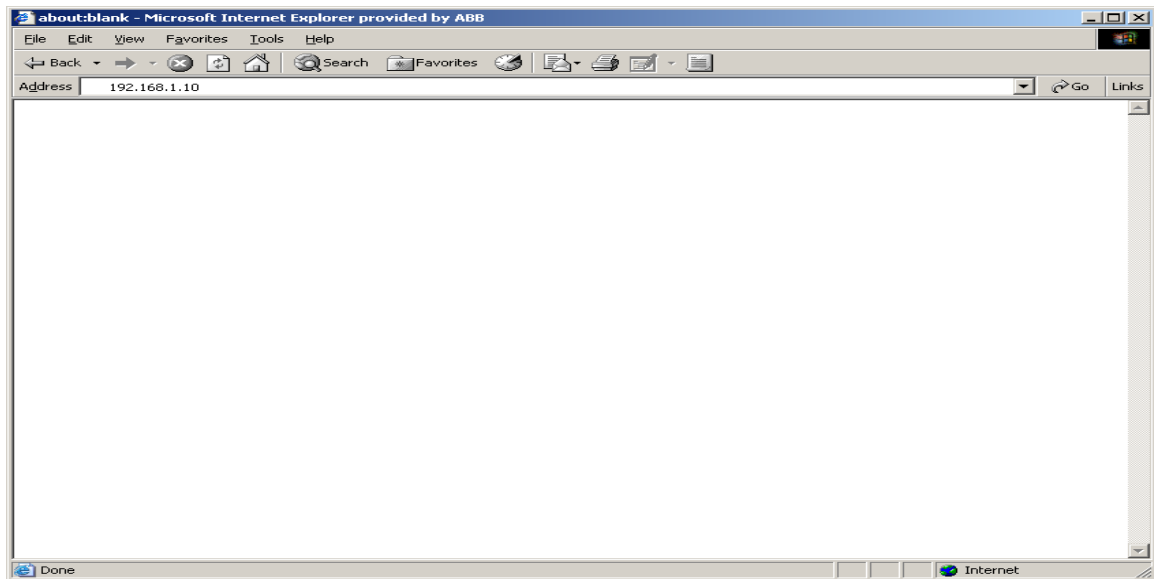

The page will appear like the one below. The quantities of the electricity meter are located in the main frame of the browser and in the left frame are all telegrams in the electricity meter. The quantities that appear will be different depending on the model of electricity meter.

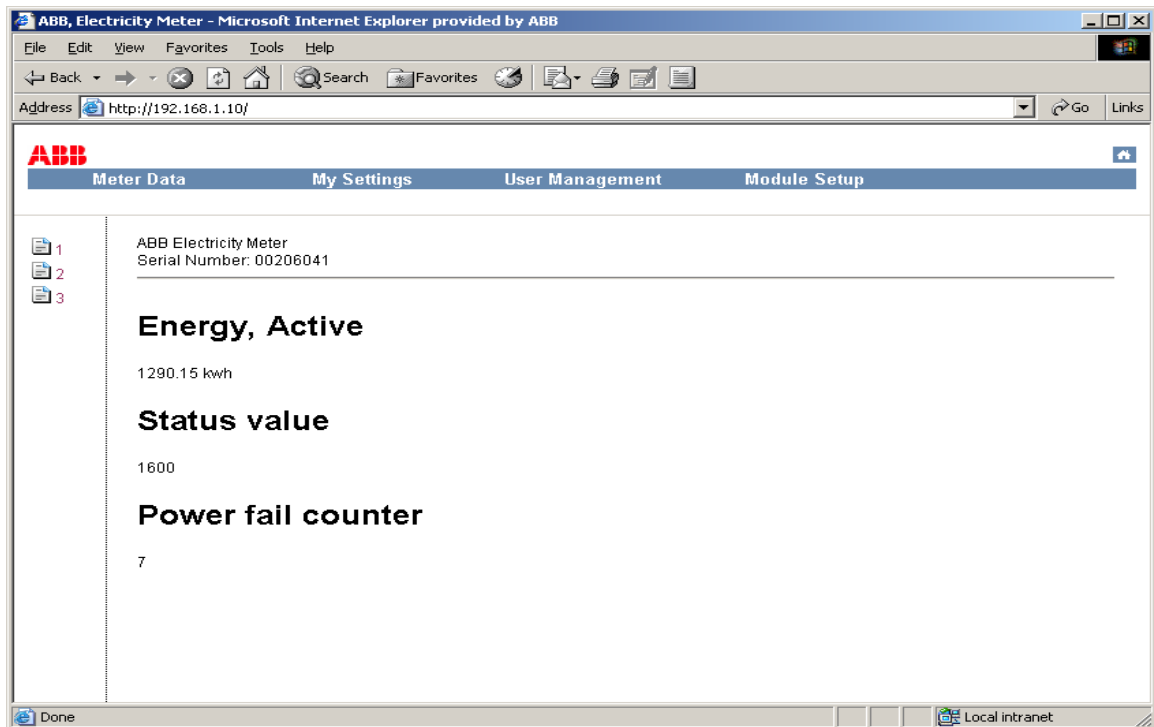


7.2 USER MANAGEMENT

This section will deal with the user management feature in ABB Ethernet communication adapter. It will discuss how to add and remove users and setting their privileges and settings.

7.2.1 ADDING A USER

Enter the *User Management* menu and click then on the *Add User* tab. Add user by filling in the fields below and submit. Please note that once the password is set it is non-recoverable, therefore save the password and keep it in a safe place.

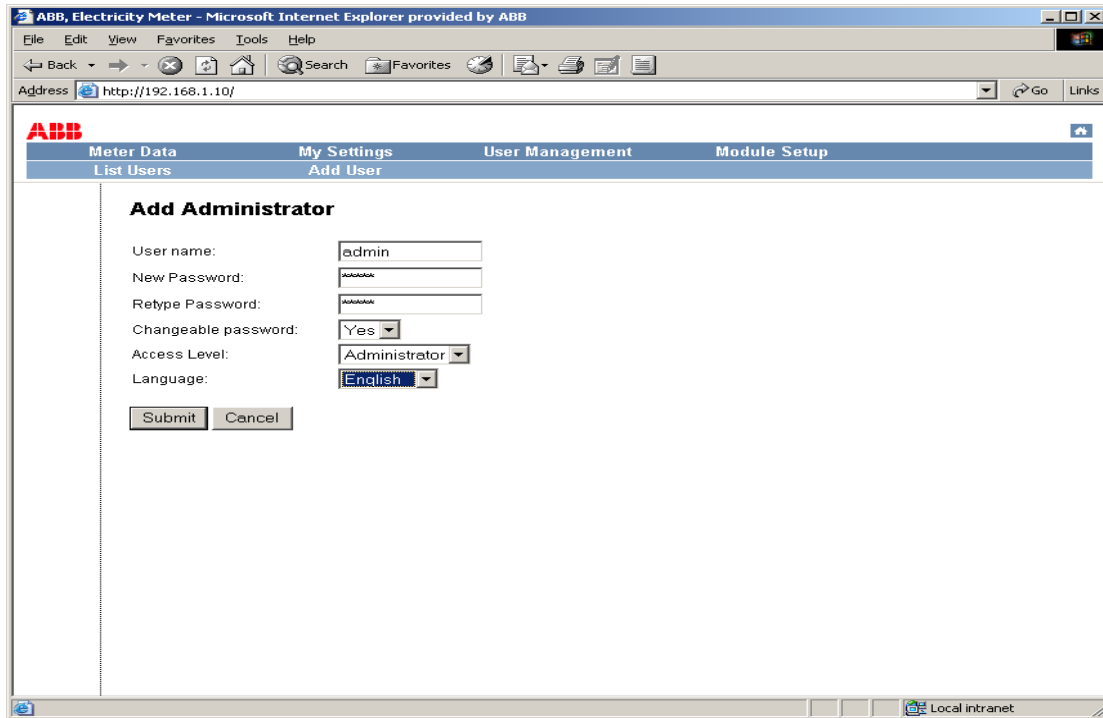


The screenshot shows a web browser window titled "ABB, Electricity Meter - Microsoft Internet Explorer provided by ABB". The address bar shows "http://192.168.1.10/". The page has a navigation menu with "Meter Data", "My Settings", "User Management", and "Module Setup". Under "User Management", there are two sub-tabs: "List Users" and "Add User". The "Add User" tab is active, displaying the "Add Administrator" form. The form contains the following fields and options:

- User name:
- New Password:
- Retype Password:
- Changeable password:
- Access Level:
- Language:


At the bottom of the form are "Submit" and "Cancel" buttons.

User data received will appear.

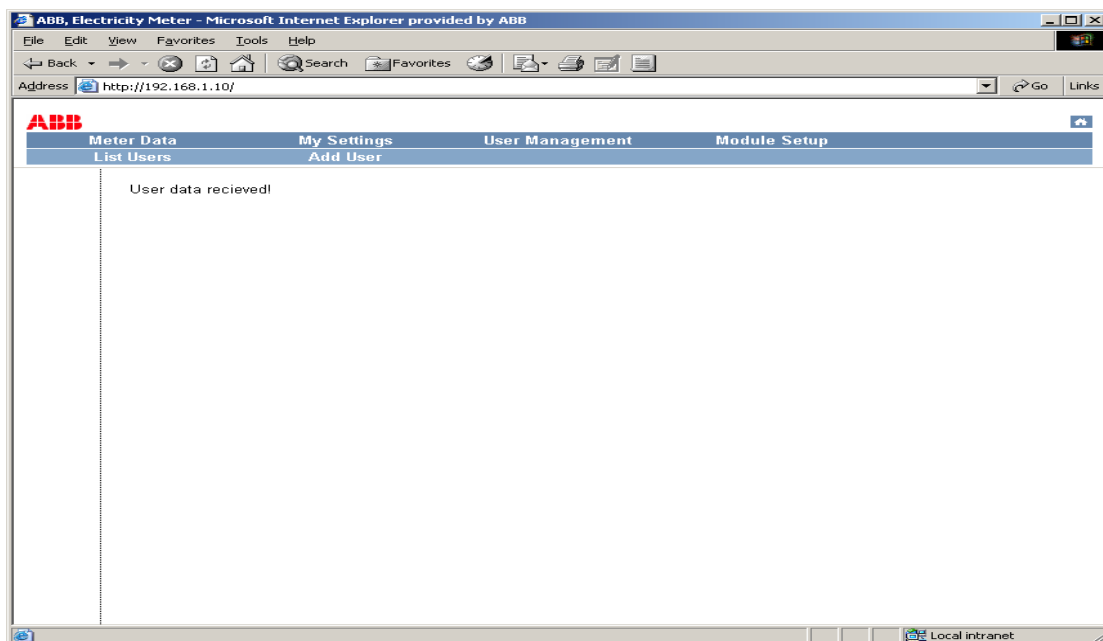


The screenshot shows the same web browser window as the previous one, but the "Add Administrator" form is no longer visible. Instead, the text "User data received!" is displayed in the main content area of the page. The navigation menu and sub-tabs remain the same.

Restart the web browser and a login window will appear. Login with username and password.

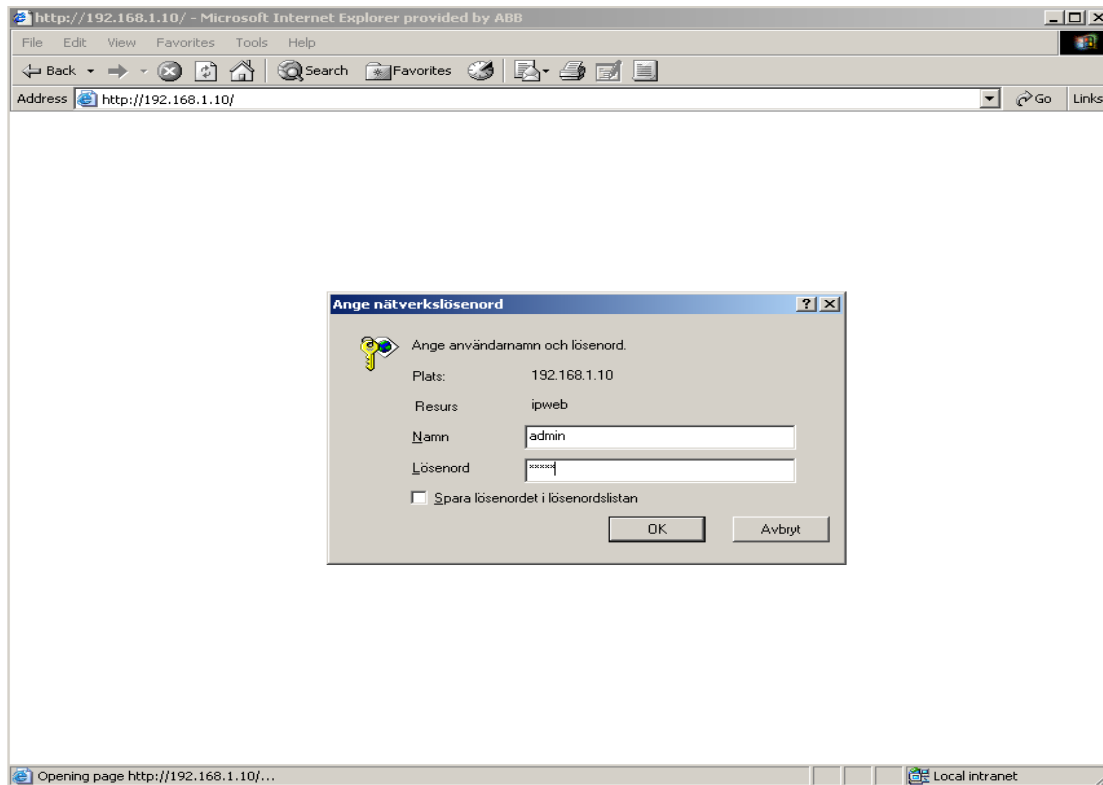


7.2.2 REMOVING USERS


Click on the *User Management* tab and then use the arrow buttons to scroll to the user that shall be removed. Click then remove.

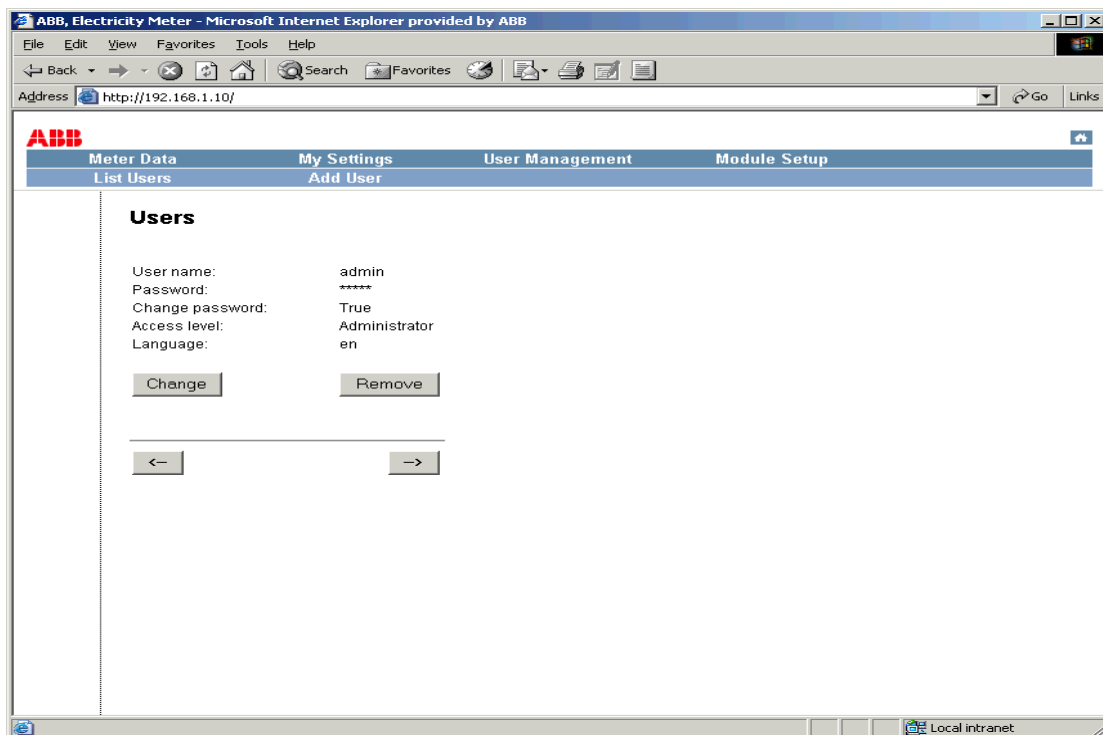

Click OK when below dialog appear.

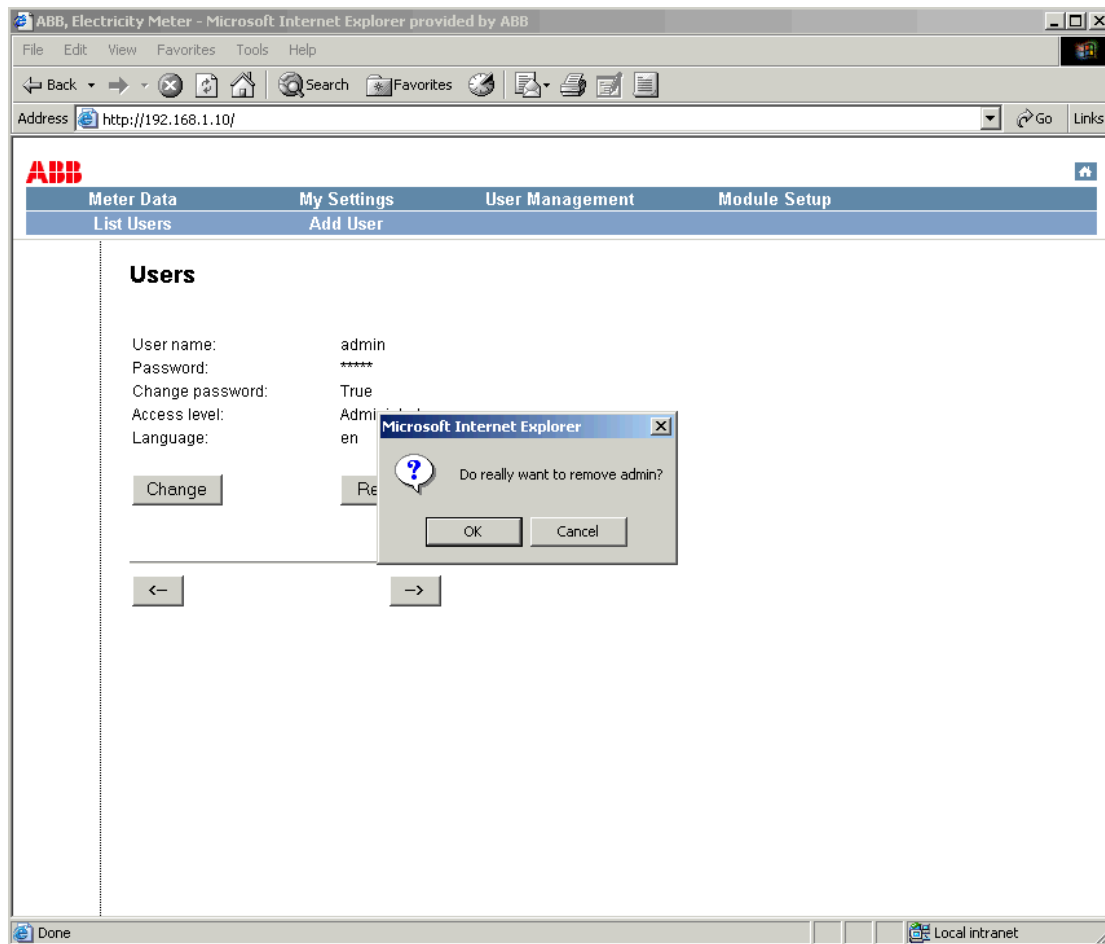


When the below screen appear the user has been removed.

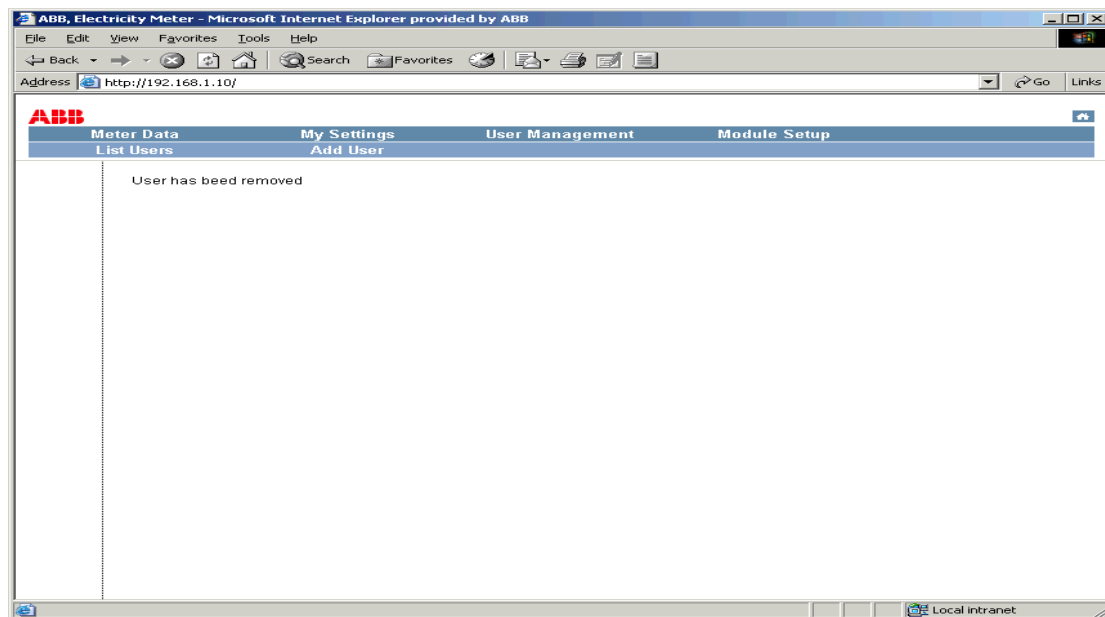


7.2.3 CONFIGURING USER SETTING

Login and click on the *My Settings* tab.

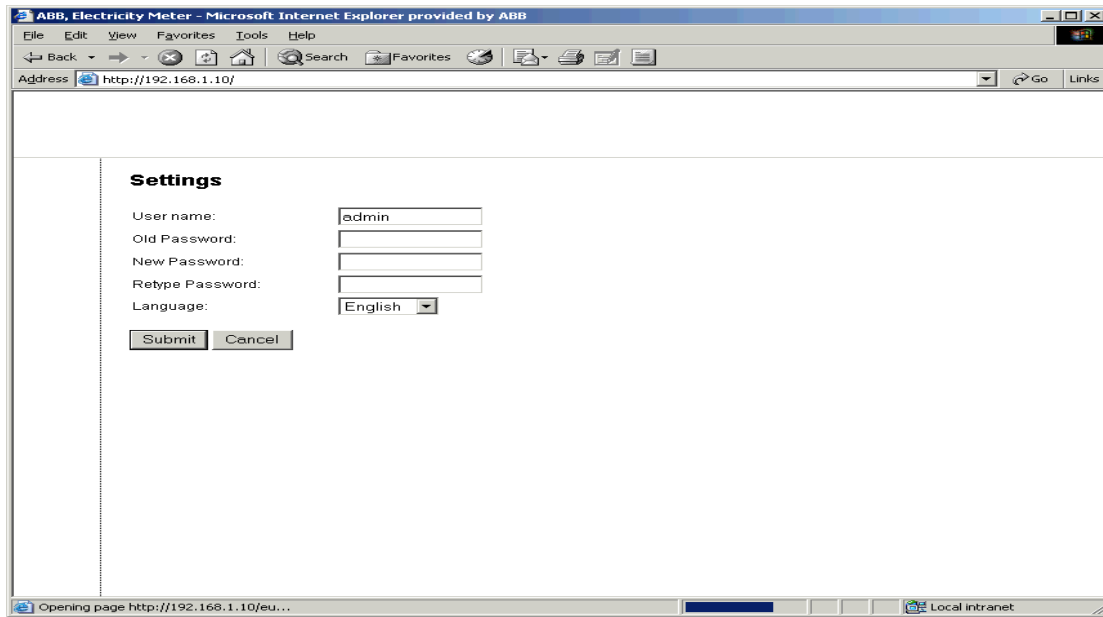

Change to the preferred settings and click submit. And the screen below will appear.

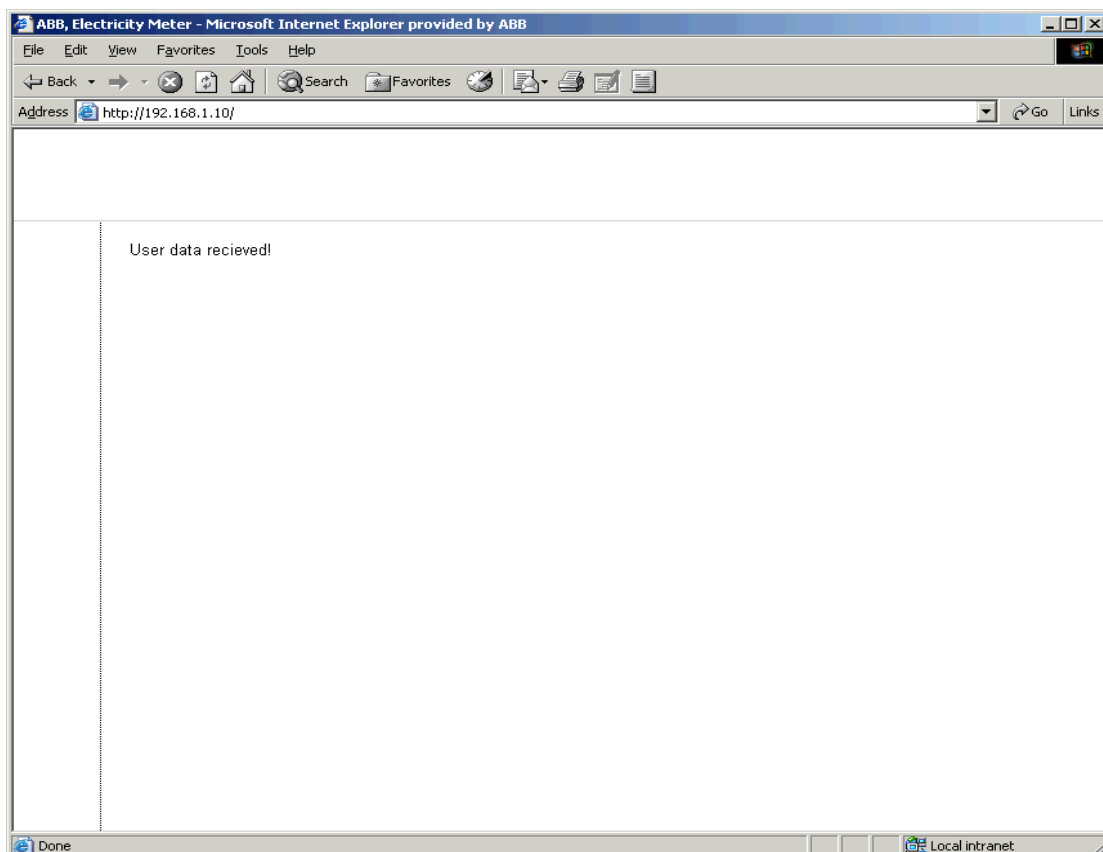


7.3 CONFIGURING ADAPTER SETTINGS

This section will describe how to configure the ABB Ethernet communication adapter's IP-address both statically and by a DHCP-server.

7.3.1 ASSIGNING IP-ADDRESS STATICALLY

Enter the *Module Setup* by clicking on the *Module Setup* tab. Uncheck the Enable DHCP check box and enter the information for static IP-address.

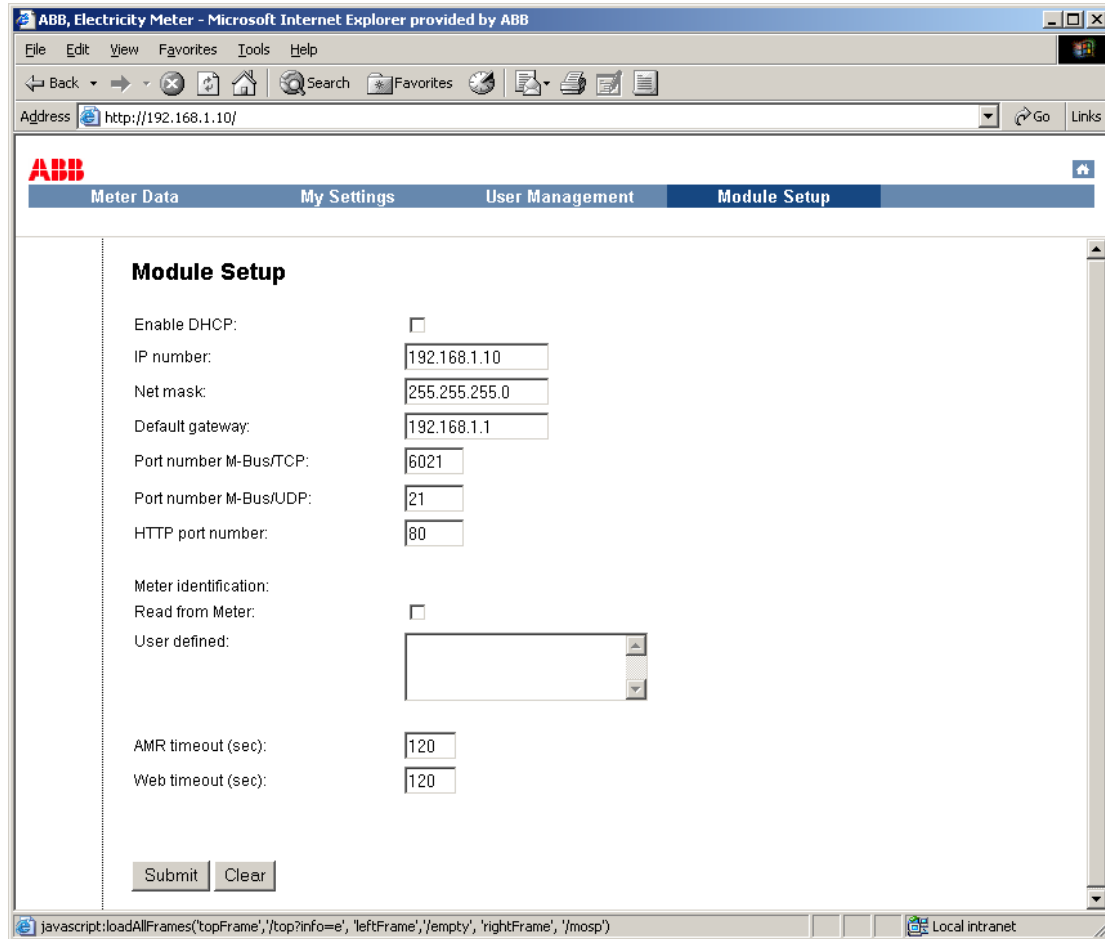


The screenshot shows a Microsoft Internet Explorer browser window displaying the ABB Electricity Meter web interface. The address bar shows `http://192.168.1.10/`. The navigation menu includes **Meter Data**, **My Settings**, **User Management**, and **Module Setup**. The **Module Setup** page contains the following configuration options:

- Enable DHCP:
- IP number:
- Net mask:
- Default gateway:
- Port number M-Bus/TCP:
- Port number M-Bus/UDP:
- HTTP port number:
- Meter identification:
 - Read from Meter:
 - User defined:
- AMR timeout (sec):
- Web timeout (sec):


At the bottom of the form are **Submit** and **Clear** buttons.

Click Submit to continue and click Reboot when below screen appears.

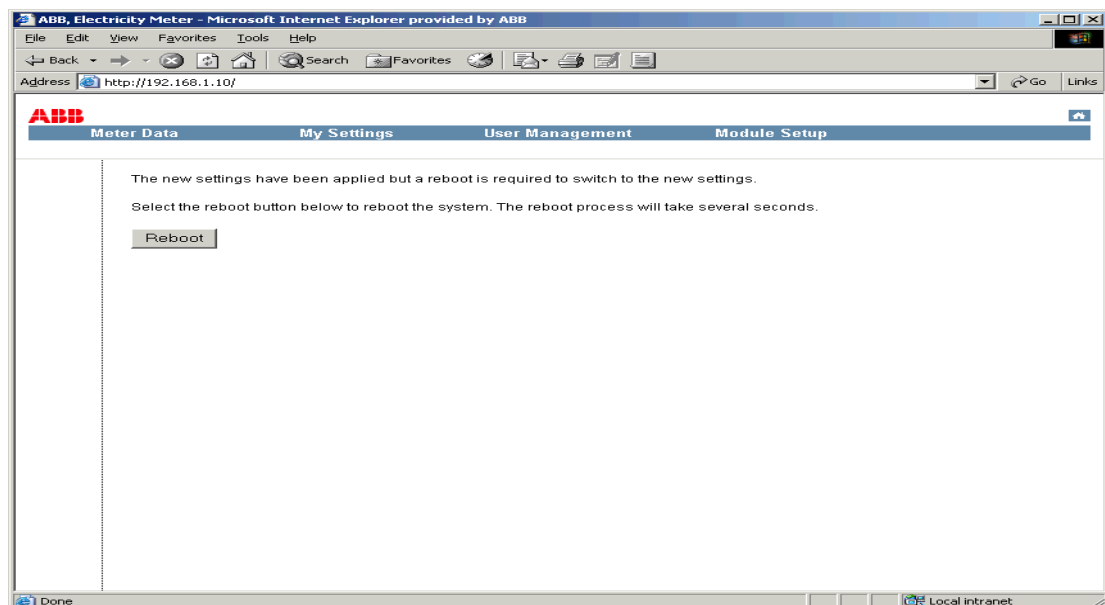


The screenshot shows the ABB Electricity Meter web interface after the settings have been applied. The message reads: "The new settings have been applied but a reboot is required to switch to the new settings. Select the reboot button below to reboot the system. The reboot process will take several seconds." Below the message is a **Reboot** button.

The IP-address has been set successfully and the adapter will reboot

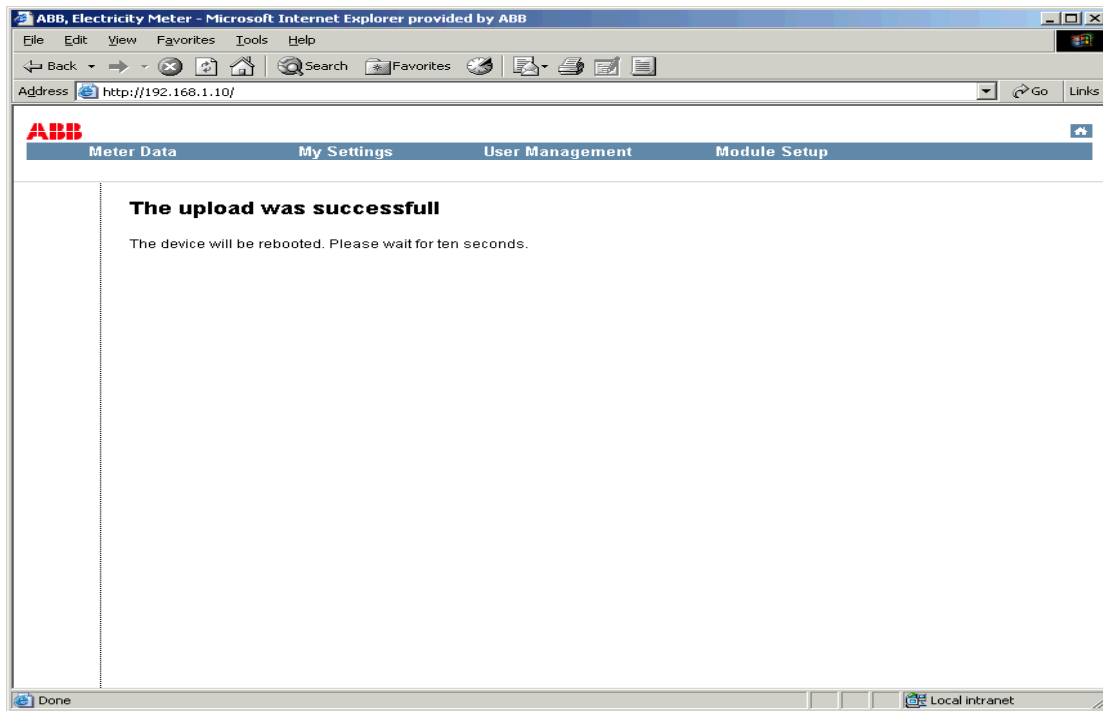


7.3.2 ASSIGNING IP-ADDRESS THROUGH DHCP-SERVER.


Click on the *Module Setup* tab to enter the *Module Setup*. Check the DHCP check box and click submit.

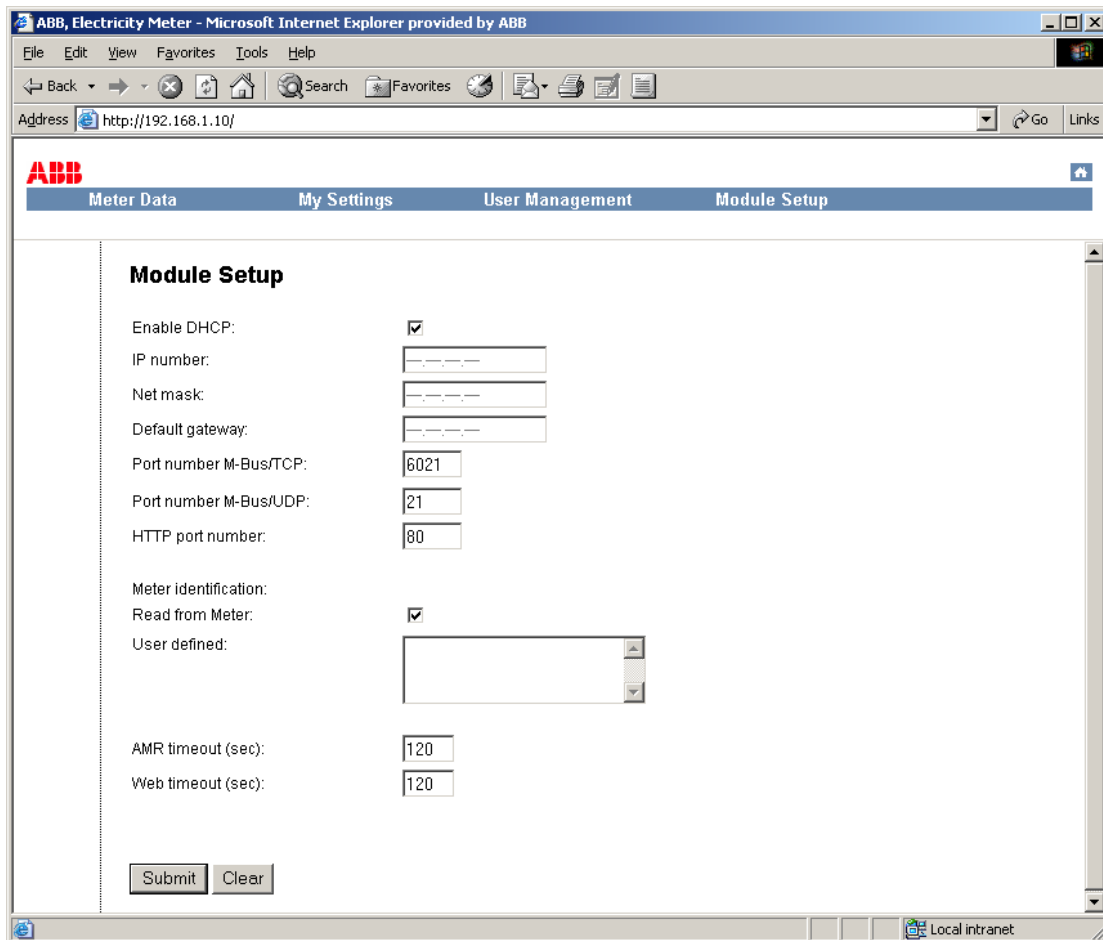

Click Reboot to adopt the new settings.

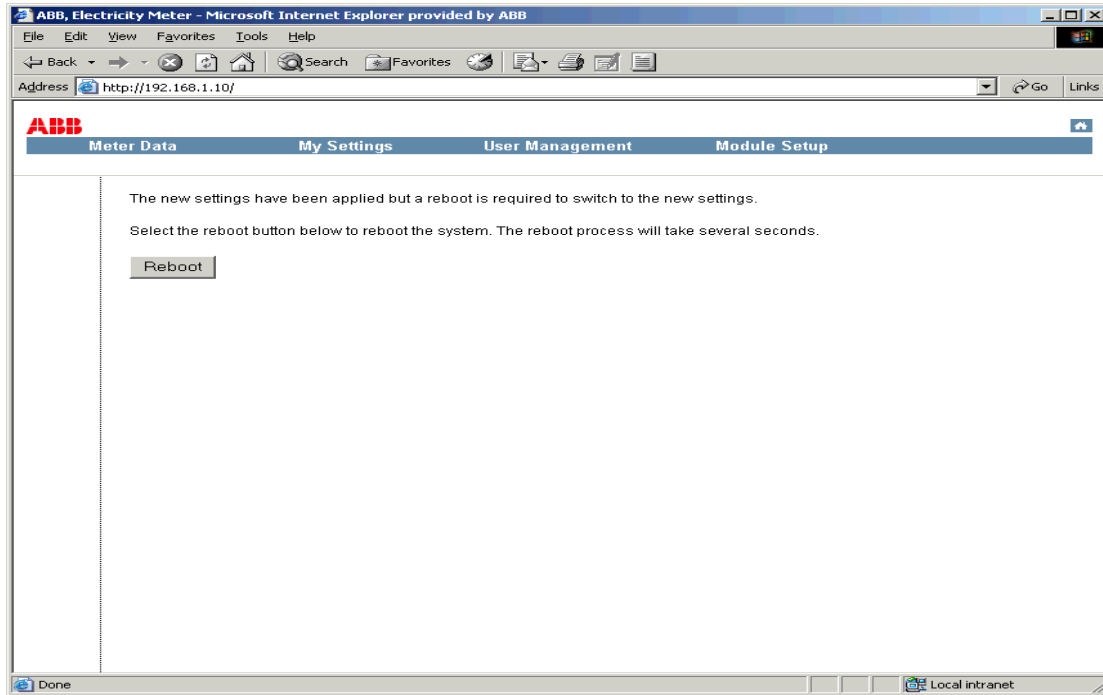

The configuration of IP-address through DHCP server has been set successfully and the adapter will reboot.

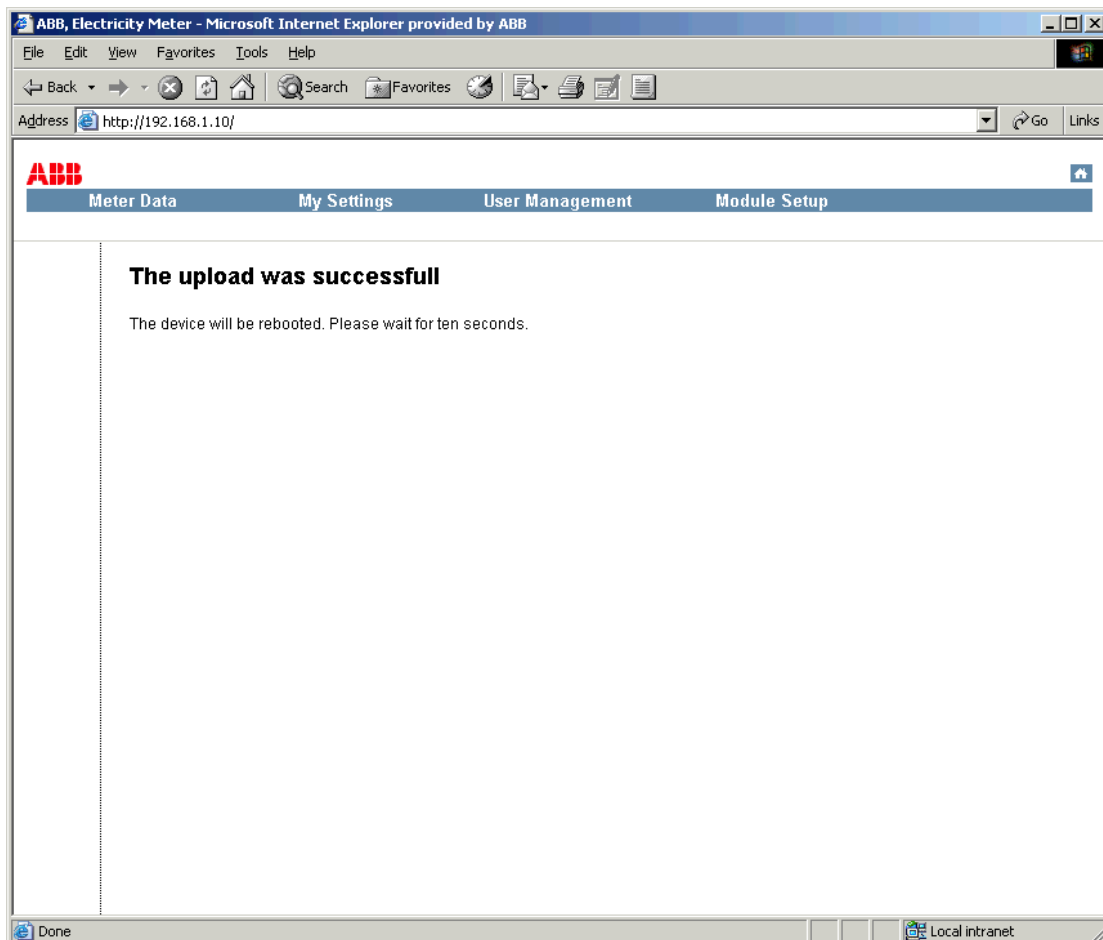

7.3.3 TIMEOUT CONFIGURATION

There are two kinds of timeouts that can be configured on the Ethernet communication adapters, AMR and Web timeout. These timeouts determines how long time the AMR or the Web server will have exclusive right to access the electricity meter. Below follows an explanation of these and how they are configured.

AMR Timeout

The AMR timeout is the time in which the AMR system has the exclusive right to access the electricity meter. This means that the web server will not be able to access the electricity meter until the AMR timeout has timed out after an AMR access of the adapter. By default the AMR timeout is set to 60 seconds.

Example: if the AMR timeout is set to 60 seconds it means that the web server will only be able to access the values of the electricity meter 60 seconds after a performed AMR access of the electricity meter.

Web Timeout

The Web timeout is the time in which the web server will have the exclusive right to access the electricity meter. This means that the AMR system will not be able to access the electricity meter until the Web timeout has timed out after an access using the web server.

This parameter is set according to the prevailing network environment and should not to be set too long as the Ethernet adapter will block the AMR system to access the electricity meter until the Web timeout has timed out. On the contrary by setting this parameter too short the AMR system can cut in and access the electricity meter before the web server has accomplished to do all it's readout of the meter. This will lead to the consequence that the communication on the network will time out and the web server will not be able to read all the pages from the electricity meter. Therefore the setting of the Web timeout should be set small enough to be able read all the pages of the meter and set large enough to keep the network communication alive. By default the Web timeout is set to 120 seconds and should be increased if the Ethernet adapter is connected to a slow network.

Example: if the Web timeout is set to 120 seconds it means that the AMR system will only be able to access the values of the electricity meter 120 seconds after an access of the web server.

8 ABBREVIATIONS AND ACRONYMS

10BASE-T	IEEE 802.3 specification for 10 Mbps Ethernet over twisted pair wiring.
DHCP	Dynamic Host Configuration Protocol, An Ethernet protocol specifying how a centralized DHCP server can assign network configuration information to multiple DHCP clients. The assigned information includes IP addresses, DNS addresses, and gateway (router) addresses.
IP	Internet Protocol, The main internetworking protocol used in the Internet. Used in conjunction with the Transfer Control Protocol (TCP) to form TCP/IP.
IP Address	A four-byte number uniquely defining each host on the Internet. Ranges of addresses are assigned by Internic, an organization formed for this purpose. Usually written in dotted-decimal notation with periods separating the bytes (for example, 192.168.1.10).
LAN	Local area network. A communications network serving users within a limited area, such as one floor of a building. A LAN typically connects multiple personal computers and shared network devices such as storage and printers. Although many technologies exist to implement a LAN, Ethernet is the most common for connecting personal computers.
MAC address	Media Access Control address. A unique 48-bit hardware address assigned to every Ethernet node. Usually written in the form 00:03:47:D8:AE:3A.
Mbps	Megabits per second.
Netmask	A number that explains which part of an IP address comprises the network address and which part is the host address on that network. It can be expressed in dotted-decimal notation or as a number appended to the IP address. For example, a 28-bit mask starting from the MSB can be shown as 255.255.255.192 or as /28 appended to the IP address.
UTP	Unshielded twisted pair. The cable used by 10BASE-T and 100BASE-Tx Ethernet networks.

9 INDEX

A

Accessing the web server.....	8
Adding a user	9
AMR timeout	16
Assigning IP-address statically.	13
Assigning IP-address through DHCP- server.	14
Automatic meter reading, AMR.....	7

C

Configuring Adapter Settings	13
Configuring User Setting.....	12

D

DHCP	14
------------	----

F

Factory reset	5
---------------------	---

H

Humidity.....	6
---------------	---

I

Infra-red	3
Installation	4
IP-address	8, 13

M

Module Setup	13, 14
--------------------	--------

<i>My Settings</i>	12
--------------------------	----

O

Overload protection	3
---------------------------	---

R

Removing users	10
Reset port	5
Reset Port	3
RJ-45 Ethernet connector.....	3

S

SCA parts	3
Soft reset.....	5
Standards	6
Status LED	3, 5

T

Temperature.....	6
Terminal for connecting power	3
Timeout configuration	16
Type designation.....	4

U

<i>User Management</i>	9, 10
------------------------------	-------

W

Web server.....	7
Web timeout.....	16